

ILLUSTRATED PARTS LIST

 
KUBOTA

MODEL WG752-E2BBH

GASOLINE ENGINE



CLICK TO ORDER PARTS

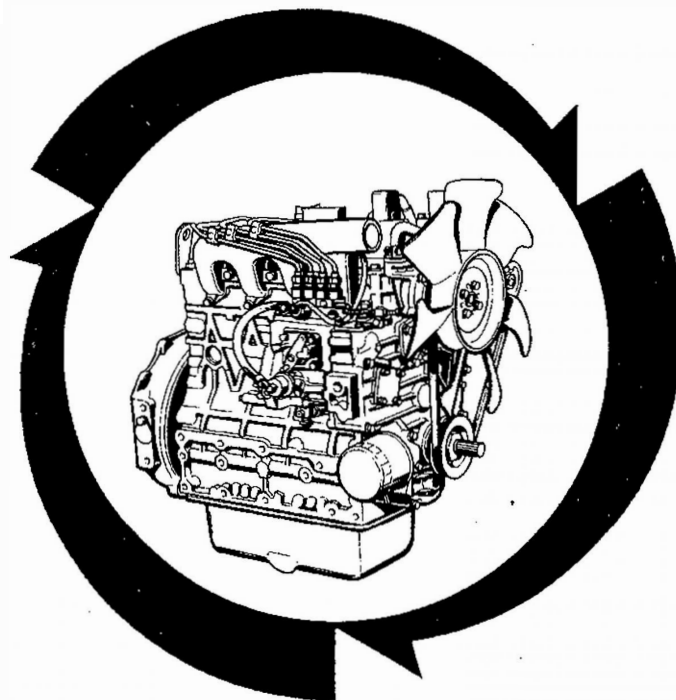

Kubota



97898 55290

12.04.KEA
>SOEM-03-272
>SOEM-04-148

 
INSTRUCTIONS INSTRUCTION

①
0102 PISTON AND CRANKSHAFT
PISTON ET VILEBREQUIN

⑪
[B]

②
B02-R

⑩ → S.No. ; A: ≤15000, B: 14000 to 15000

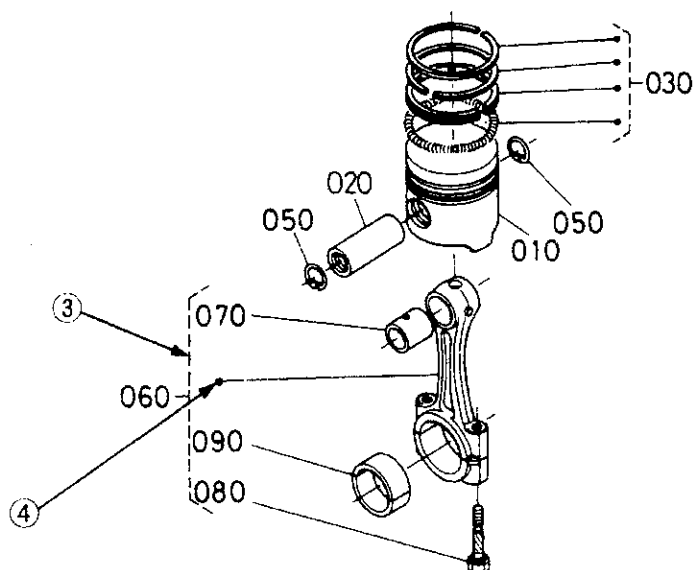

REF. No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	QTY/S.No. QTE/No.S.		I.C.	REMARKS REMARQUES
				A	B		
010	15800-0000-0	PISTON	PISTON	~15000	~15000	↕	{Example-1}
010	15800-0000-2	PISTON	PISTON	15001~	15001~	↕	{Example-1}
020	15800-1000-0	PIN,PISTON	AXE DE PISTON	~15000	~15000	↕	
020	15800-1000-2	PIN,PISTON	AXE DE PISTON	15001~	15001~	↕	{Example-2}
030	15800-2000-0	ASSY PISTON RING	ENS.JEU DE SEGMENTS	~15000	~15000	↕	{Example-2}
030	15830-2000-0	ASSY PISTON RING	ENS.JEU DE SEGMENTS	15001~	15001~	↕	{Example-3}
							{Example-3}

A:XXXX, B:XXXX

- ① Fig. No. Represents No. corresponding to each group name.
- ② L. No. Substitute for conventional page numbering. Left-hand pages of the parts list are
(location No.) numbered in **XXX-L**, and the right-hand pages in **XXX-R**.
The location No. are also used in numerical index at the end of parts list.
- ③ Components The components of an assembly are identified by a bracket of dotted lines.
- ④ Point Indicates that the parts is not sold independently.
The assembly (Ref.No.060) containing the part needs to be ordered.
- ⑤ REF. No. Reference numbers are assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ⑥ Model name The name of the basic model is indicated in this column. Other applicable models are indicated on the "REMARKS" column ⑨.
- ⑦ S. No. Indicates a group of serial numbers to which a design change is applied.
(serial No.)
- ⑧ I. C. Indicates the interchangeability of parts due to design change.
(interchangeability)
- Example-1  indicates that a new part can replace an old part, but not vice versa.
15800-0000-0 is applicable to the first serial number to S. No. 15000.
15800-0000-2 is applicable to the first serial number and above.
- Example-2  indicates that the new and old parts are not interchangeable.
15800-1000-0 is applicable to the first serial number to S. No. 15000.
15800-1000-2 is applicable to S. No. 15001 and above.
- Example-3  indicates that the new and old parts are interchangeable.
Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.
- ⑨ REMARKS 1 In this column, enter other applicable model names, dimensions and other special items.
The following symbols and abbreviations are used throughout this book.
29*12.00-15 Tire size
sq.m m² sq.mm mm²
cu.m m³ cu.mm mm³
D Diameter L Length
- ⑩ REMARKS 2 The following expressions are used in NOTE for each group.
Machines' serial numbers are indicated as follows.
<=15000 Serial number below 15000.
>=15001 Serial number above 15001.
14000 to 15000 Serial number 14000 to 15000.
For some models, the above expressions may also be used REMARKS 1 ⑨.
- ⑪ Specifications The types and destinations of sister models are indicated. These indications are
(for sister models) given to tell their relevant pages in this book.

- ① No. de Fig Représente le No. de chaque nom de groupe.
- ② No.d'emplacement ... Représente le substitut du numérotage de page ordinaire. Les pages du côté gauche de la liste des pièces détachées sont numérotées en **XXX-L**. Celles du côté droit sont numérotées en **XXX-R**. Les No. d'emplacement sont également utilisés dans l'index numérique à la fin de la liste des pièces détachées.
- ③ Composantes Les composantes d'un ensemble sont identifiées par des parenthèses en pointillé.
- ④ Point Indique que la pièce n'est pas à vendre toute seule.
Elle doit être commandée avec l'ensemble (POS.No. 060) qui la contient.
- ⑤ POS.No. Des numéros de position sont donnés aux pièces représentées dans l'illustration. Le référence d'une pièce de l'illustration peut être identifié en se reportant au même numéro de position indiqué dans la liste des pièces détachées.
- ⑥ Nom de type Le nom du type de base est indiqué dans cette colonne. Les autres modèles sont indiqués dans la colonne des "REMARQUES" ⑨.
- ⑦ No. S. Indique un groupe de numéros de série qui a subi des modifications de modèle.
(No. de série)
- ⑧ I. C. Indique la permutabilité des pièces due à un changement dans le modèle.
(permutabilité)
- Exemple-1 ☐ indique que la nouvelle pièce peut remplacer la vieille, mais pas vice versa.
Le 15800-0000-0 s'applique au premier numéro de série jusqu'au No.S. 15000.
Le 15800-0000-2 s'applique au premier numéro de série et à ceux ci-dessus.
- Exemple-2 ☒ indique que la nouvelle et vieille pièces sont permutable.
Le 15800-1000-0 s'applique au premier numéro de série jusqu'au No.S. 15000.
Le 15800-1000-2 s'applique au No.S. 15001 et à ceuxci-dessus.
- Exemple-3 ☐ indique que la nouvelle piése et la vielle pièce sont interchangeable. Toules deux numéros 15800-2000-0 et 15830-2000-0 sont applicables a premier numéro de cette depuis.
- ⑨ REMARQUES 1 ... Cette colonne renferme d'autres noms de modèles applicables, les dimensions et autres éléments spéciaux.
Les symboles abréviations suivants sont utilisés dans l'ensemble de ce manuel.
29*12.00-15 Dimension des pneus
sq.m m² sq.mm mm²
cu.m m³ cu.mm mm³
D Diamètre L Longueur
- ⑩ REMARQUES 2 ... Les expressions suivantes sont utilisées dans la NOTE de chaque groupe.
Les numéros de série des machines sont indiqués de la manière suivante.
<=15000 Numéros de série au-dessous de 15000.
>=15001 Numéros de série au-dessus de 15001.
14000 to 15000 Numéros de série 14000 à 15000.
Pour certaines modèles, les expressions ci-dessus peuvent aussi être utilisées dans la rubrique des REMARQUES 1 ⑨.
- ⑪ Spécifications Les types et les destinations des modèles soeurs sont indiqués. Ces indications
(pour modèles soeurs) sont données pour donner leurs pages relatives dans ce livre.

CONTENTS


[WG752-E2BBH]	
0001	CRANK CASE 1
0002	OIL PAN 2
0003	CYLINDER HEAD 3
0004	GEAR CASE 4
0005	HEAD COVER 5
0006	OIL FILTER 6
0007	DIPSTICK AND GUIDE 7
0008	OIL PUMP 8
0100	MAIN BEARING CASE 9
0101	CAMSHAFT AND IDLE GEAR SHAFT 10
0102	PISTON AND CRANKSHAFT 11
0103	FLYWHEEL 13
0105	FUEL CAMSHAFT 14
0200	GOVERNOR LEVER 15
0201	FUEL FILTER 16
0202	CARBURETTOR 17
0204	FORK LEVER 18
0205	SPEED CONTROL LEVER 19
0300	SPARK PLUG AND DISTRIBUTOR 20
0301	DISTRIBUTOR (COMPONENT PARTS) 21
0302	IGNITION COIL 22
0400	DYNAMO AND PULLEY 23
0401	DYNAMO (COMPONENT PARTS) 24
0404	STARTER 25
0405	STARTER (COMPONENT PARTS) 26
0406	OIL SWITCH/THERMOMETER AND PLUG 27
0500	WATER FLANGE AND THERMOSTAT 28
0501	WATER PUMP 29
0503	WATER PIPE 30
0504	FAN 31
0600	VALVE AND ROCKER ARM 32
0601	INLET MANIFOLD 33
0602	EXHAUST MANIFOLD 34
0808	ACCESSORIES AND SERVICE PARTS 35
0809	LABEL AND OPERATOR'S MANUAL 36
0906	OPTION 37
NUMERICAL INDEX 38	

SOMMAIRE

[WG752-E2BBH]

0001	CARTER MOTEUR	1
0002	CARTER D'HUILE	2
0003	CULASSE	3
0004	CARTER DE DISTRIBUTION	4
0005	COUVRE-CULBUTEURS	5
0006	FILTRE D'HUILE	6
0007	JAUGE D'HUILE ET GUIDE	7
0008	POMPE D'HUILE	8
0100	PALIER DE VILEBREQUIN	9
0101	ARBRE A CAMES ET ARBRE DE PIGNON FOU	10
0102	PISTONS ET VILEBREQUIN	11
0103	VOLANT MOTEUR	13
0105	ARBRE A CAMES DE CARBURANT	14
0200	LEVIER DE REGULATEUR	15
0201	FILTRE A CARBURANT	16
0202	CARBURATEUR	17
0204	LEVIER A FOURCHE	18
0205	LEVIER DE VIT-CONTROLE	19
0300	BOUGIE ALLUMAGE ET DISTRIBUTEUR	20
0301	DISTRIBUTEUR (PARTIES COMPOSANTES)	21
0302	BOBINE D'ALLUMAGE	22
0400	DYNAMO	23
0401	DYNAMO (PARTIES COMPOSANTES)	24
0404	DEMARREUR	25
0405	DEMARREUR (PARTIES COMPOSANTES)	26
0406	CONTACT A HUILE THERMOMETRE ET OBTURATEUR	27
0500	BRIDE ET THERMOSTAT	28
0501	POMPE A EAU	29
0503	TUYAU D'EAU	30
0504	VENTILATEUR	31
0600	SOUPAPES ET CULBUTEURS	32
0601	COLLECTEUR D'ADMISSION	33
0602	COLLECTEUR D'ECHAPPEMENT	34
0808	ACCESSOIRES ET PIECES DE SERVICE	35
0809	JEU D'ETIQUETTES ET INSTRUCTIONS	36
0906	OPTION	37
	INDEX NUMERIQUE	38

 **CRANK CASE
CARTER MOTEUR**

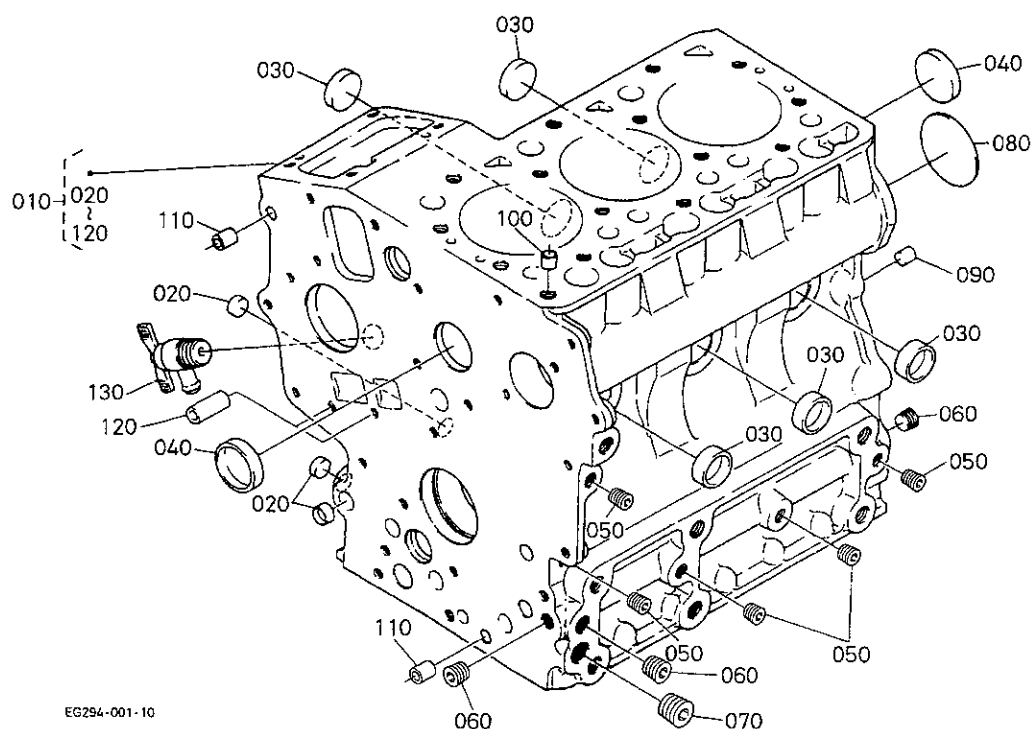

EG294-001-10

A:WG752-E2BBH

[illegible]

 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

This exploded perspective view shows the assembly of a container. The main component is a rectangular container (010) with a central circular opening. A lid (020) is shown being placed into this opening. A bracket (050) is positioned to be attached to the top edge of the container, secured by a screw (060). A curved arm (070) is shown being attached to the bracket. A cap (040) is shown being placed into a hole in the side of the container, secured by a screw (030). A bolt (020) is shown being inserted into a hole in the bottom of the container. The reference numerals are: 010, 020, 030, 040, 050, 060, 070.

[illegible]

2


**CYLINDER HEAD
CULASSE**

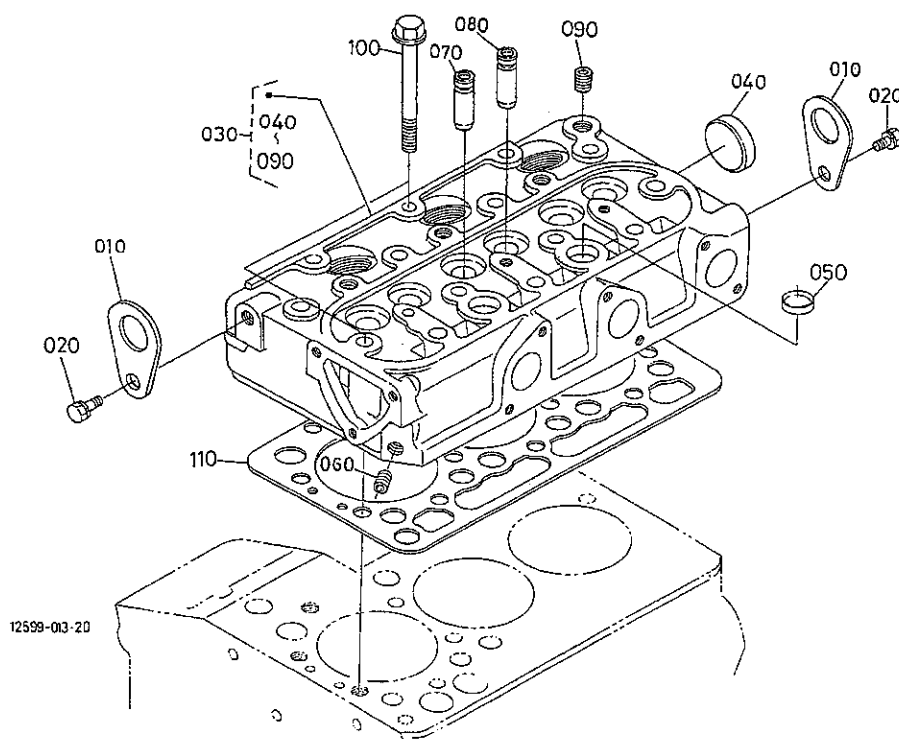

A:WG752-E2BBH

[illegible]

 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

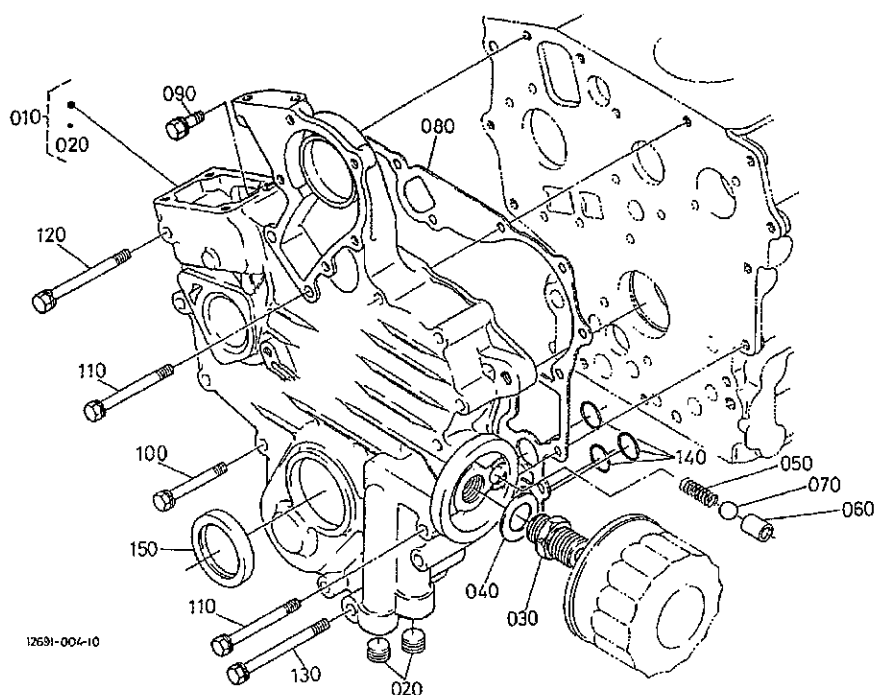

A:WG752-E2BBH

[illegible]

 HEAD COVER
COUVRE-CULBUTEURS

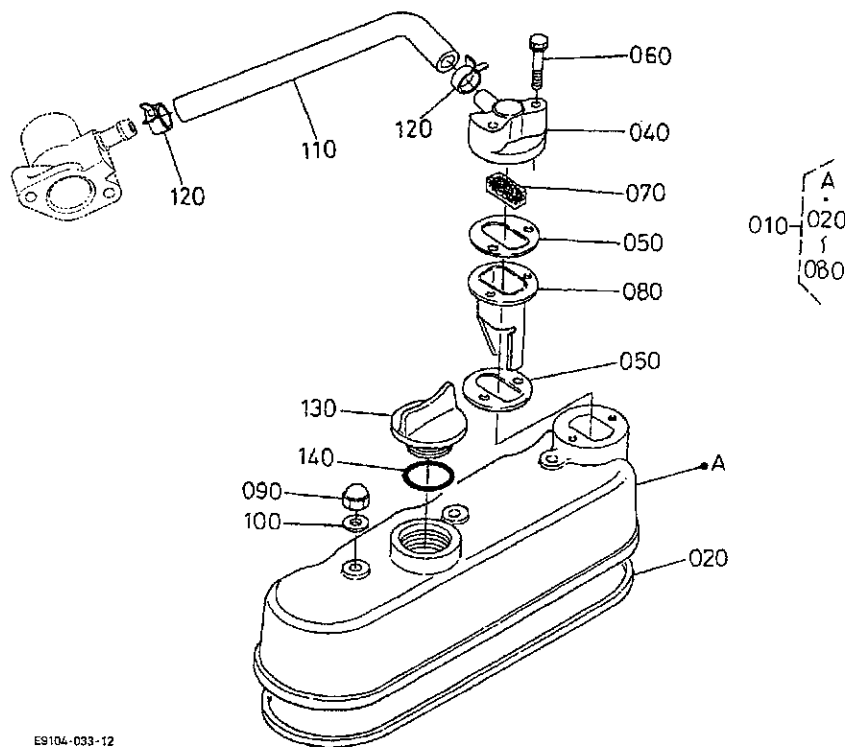


E9104-033-12

A:WG752-E2BBH

[illegible]


↔ interchangeable; ≠ not interchangeable; ← new for old; → old for new

 OIL FILTER
FILTRE D'HUILE

[illegible]

↔ interchangeable; ≠ not interchangeable; ← new for old; → old for new

 DIPSTICK AND GUIDE
JAUGE D'HUILE ET GUIDE

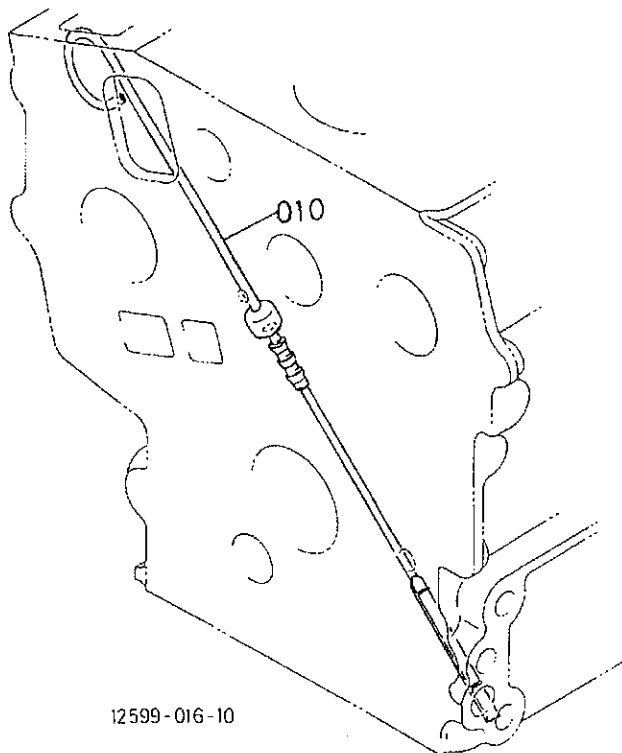


12599-016-10

A:WG752-E2BBH

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 OIL PUMP
POMPE D'HUILE

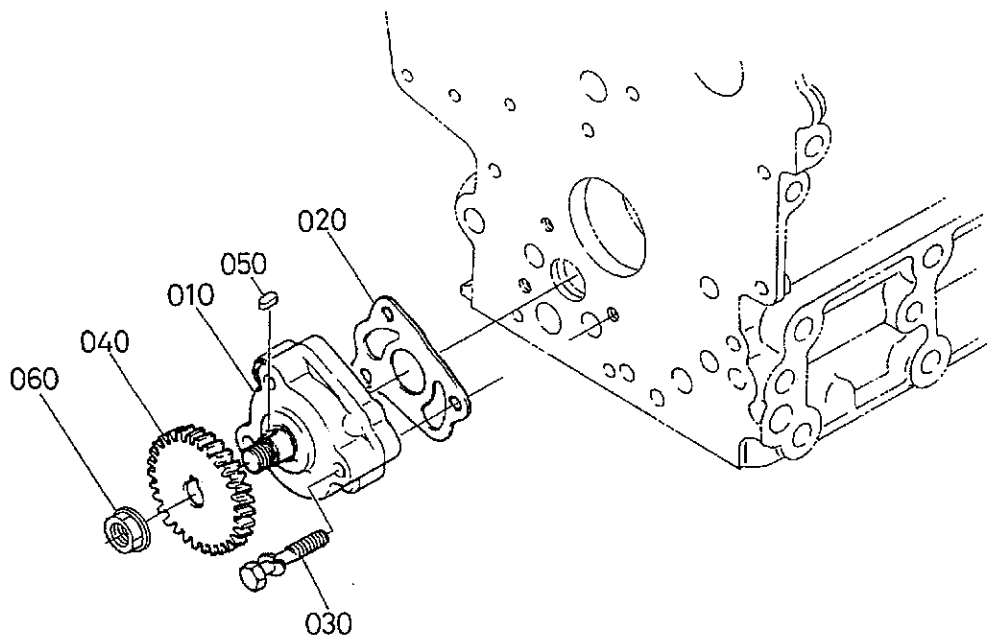

17060-002-10

A:WG752-E2BBH

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 
MAIN BEARING CASE
PALIERS DE VILEBREQUIN

[illegible]

9

0101

CAMSHAFT AND IDLE GEAR SHAFT
ARBRE A CAMES ET ARBRE DE PIGNON FOU

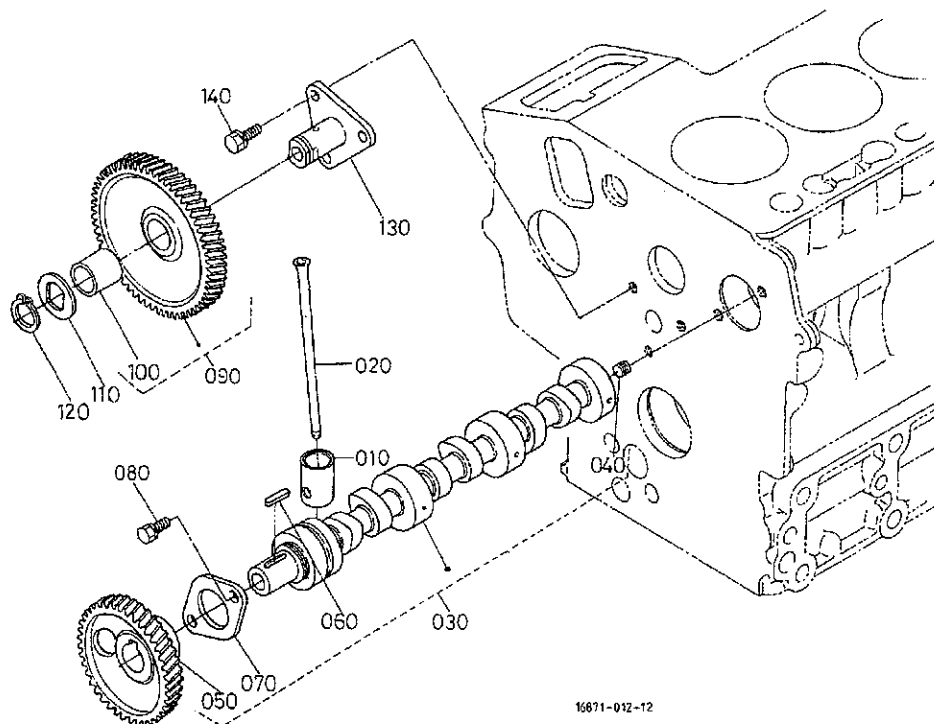


16871-017-12

A:WG752-E2BBH

[illegible]

 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

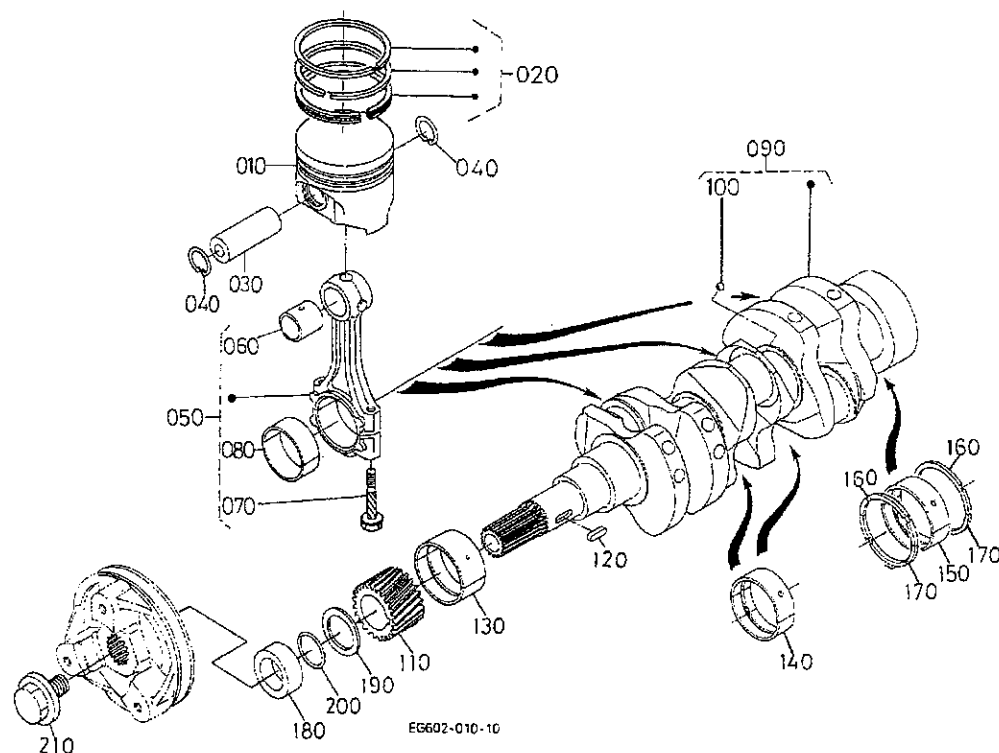

A:WG752-E2BBH

REF. No. PCS. No.	PART No. REFERENCE	PART NAME	DESIGNATION	Q' TY/S. No. Q' TE/No. S.		I. C.	REMARKS REMARQUES
				A	B		
010	EG601-2111-0	PISTON	PISTON	3	-		STD
010	EG601-2191-0	PISTON	PISTON	3	-		+0.5mm
020	12691-2105-3	ASSY PISTON RING	ENS. SEGMENT	3	-		STD
020	12691-2109-3	ASSY PISTON RING	ENS. SEGMENT	3	-		+0.5mm
030	12581-2131-0	PIN, PISTON	AXE DE PISTON	3	-		
040	14601-2133-0	CIR CLIP, PISTON PIN	CIRCLIP	6	-		
050	15861-2201-0	ASSY CONNECTING ROD	ENS. BIELLE	3	-		
060	15841-2198-0	BUSH, PISTON PIN	BAGUE DE BIELLE	3	-		
070	16851-2214-0	BOLT, CONNECTING ROD	VIS DE BIELLE	6	-		
080	15861-2231-0	METAL, CRANKPIN	COUSSINET DE BIELLE	3	-		STD SET
080	15861-2297-0	METAL, CRANKPIN	COUSSINET DE BIELLE	3	-		-0.2mm SET
080	15861-2298-0	METAL, CRANKPIN	COUSSINET DE BIELLE	3	-		-0.4mm SET
090	16861-2301-0	COMP. CRANKSHAFT	VILEBREQUIN COMPLET	1	-		
100	07715-03207	BALL	BILLE	3	-		
110	15841-2411-0	GEAR, CRANK	PIGNON	1	-		
120	05712-00515	KEY, FEATHER	CLAVETTE	1	-		
130	15861-2347-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	1	-		STD
130	15861-2391-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	1	-		-0.2mm
130	15861-2392-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	1	-		-0.4mm
140	15861-2348-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	2	-		STD SET
140	15861-2386-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	2	-		-0.2mm SET
140	15861-2387-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	2	-		-0.4mm SET
150	15694-2348-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	1	-		STD SET
150	15694-2393-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	1	-		-0.2mm SET
150	15694-2394-0	METAL, CRANKSHAFT	COUSSINET DE VILEBR.	1	-		-0.4mm SET
160	15261-2353-0	METAL, SIDE	COUSSINET DE LATERAL	2	-		STD
160	15261-2395-0	METAL, SIDE	COUSSINET DE LATERAL	2	-		+0.2mm
160	15261-2396-0	METAL, SIDE	COUSSINET DE LATERAL	2	-		+0.4mm
170	15261-2354-0	METAL, SIDE	COUSSINET DE LATERAL	2	-		STD
170	15261-2397-0	METAL, SIDE	COUSSINET DE LATERAL	2	-		+0.2mm

 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

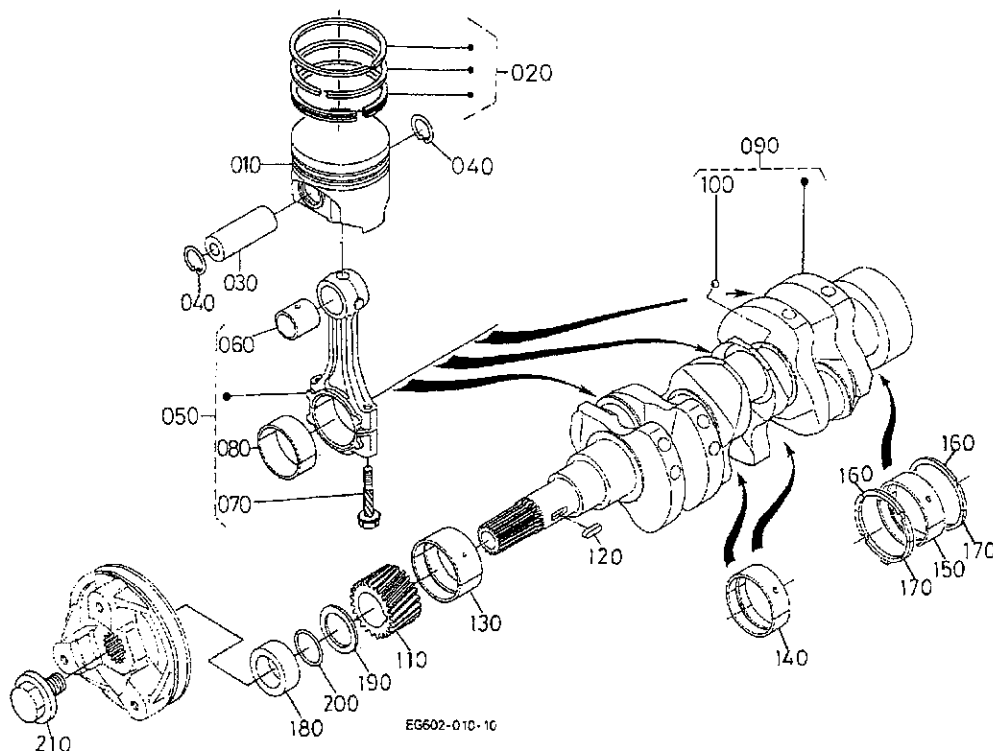

A:WG752-E2BBH

[illegible]

 ↔ interchangeable; ≠ not interchangeable; ← new for old; → old for new

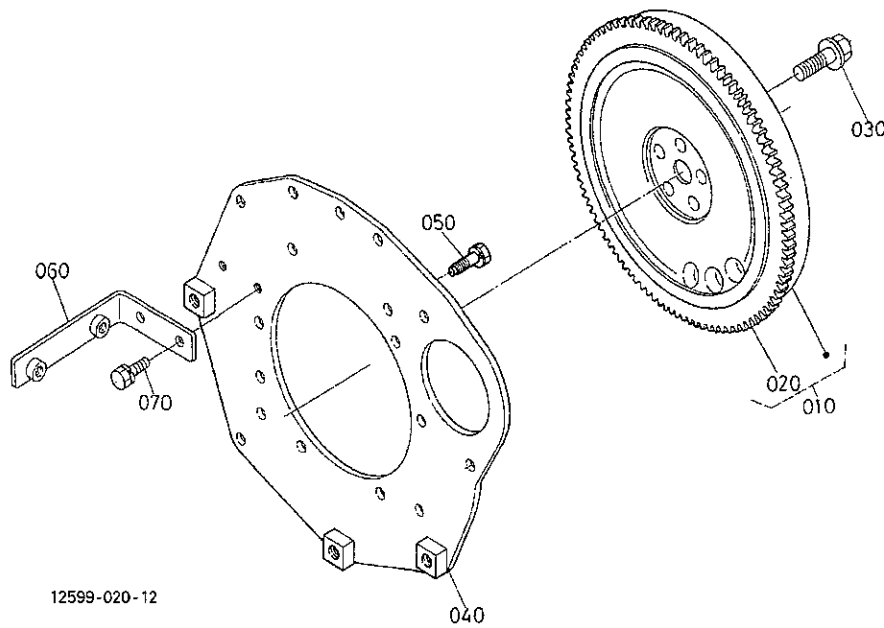


12599-020-12

A:WG752-E2BBH

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 0105 FUEL CAMSHAFT
ARBRE A CAMES DE CARBURANT

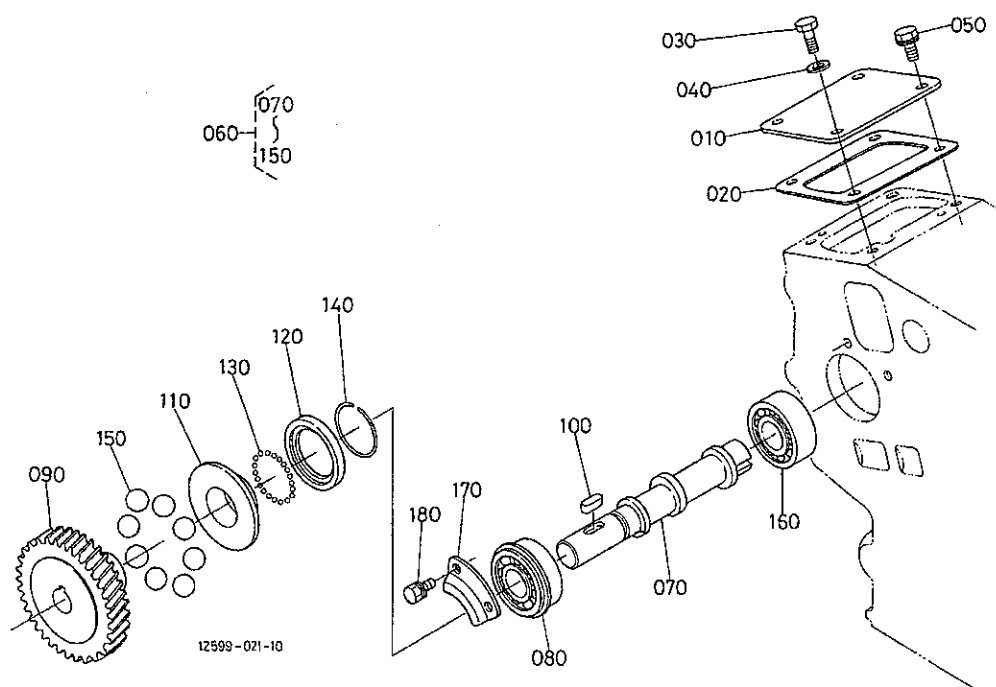

A:WG752-E2BBH

[illegible]

 
↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

GOVERNOR LEVER
LEVIER DE REGULAT

[illegible]


15

FUEL FILTER
FILTRE A CARBURANT

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 FORK LEVER
LEVIER A FOURCHE

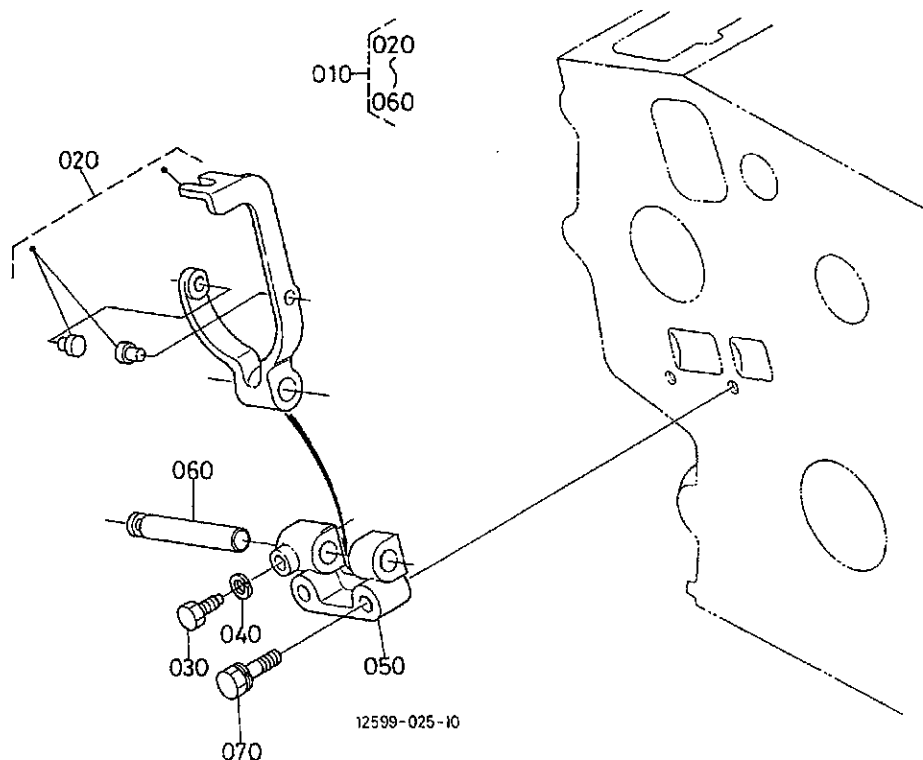

A:WG752-E2BBH


[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

SPEED CONTROL LEVER
LEVIER DE VIT-CONTROLE


#

 REV. SEPT. 20 '01

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 SPARK PLUG AND DISTRIBUTOR
BOUGIE ALLUMAGE ET DISTRIBUTEUR

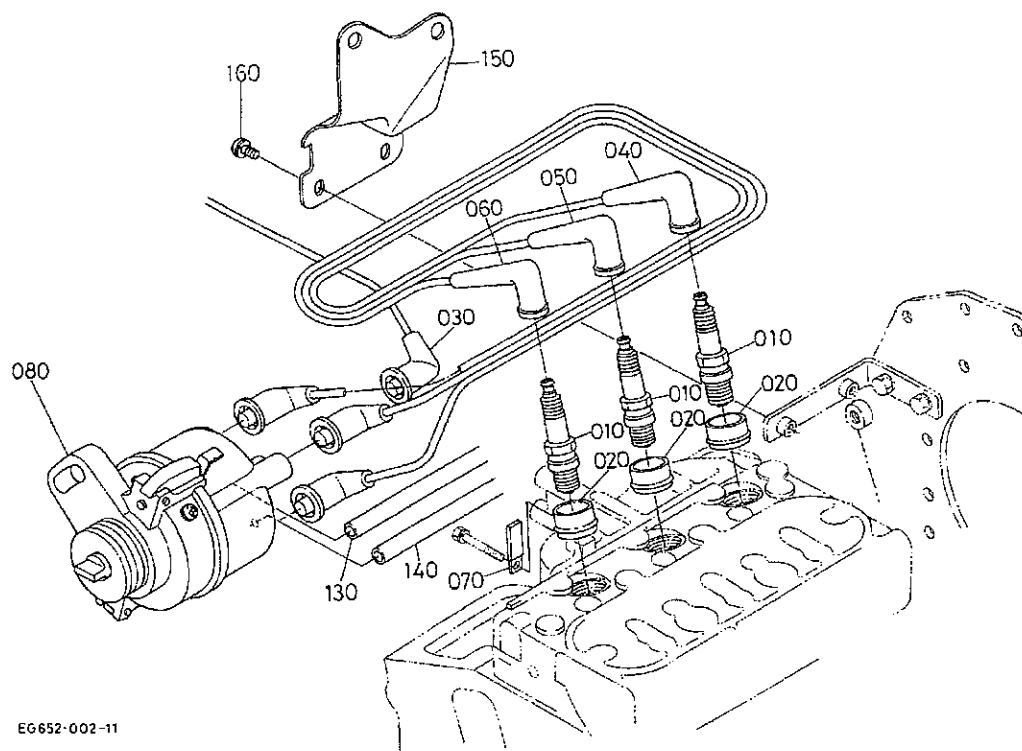


EG652-002-11

A:WG752-E2BBH


[illegible]

 ↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

DISTRIBUTOR (COMPONENT PARTS)
DISTRIBUTEUR (PARTIES COMPOSANTES)REMARKS
REMARQUES

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

 IGNITION COIL
BOBINE D'ALLUMAGE

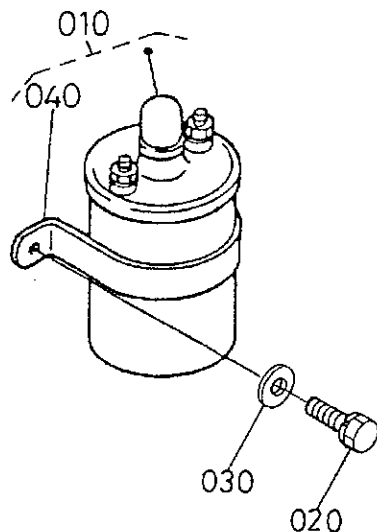


12691-016-12

A:WG752-E2BBH

[illegible]

 ↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

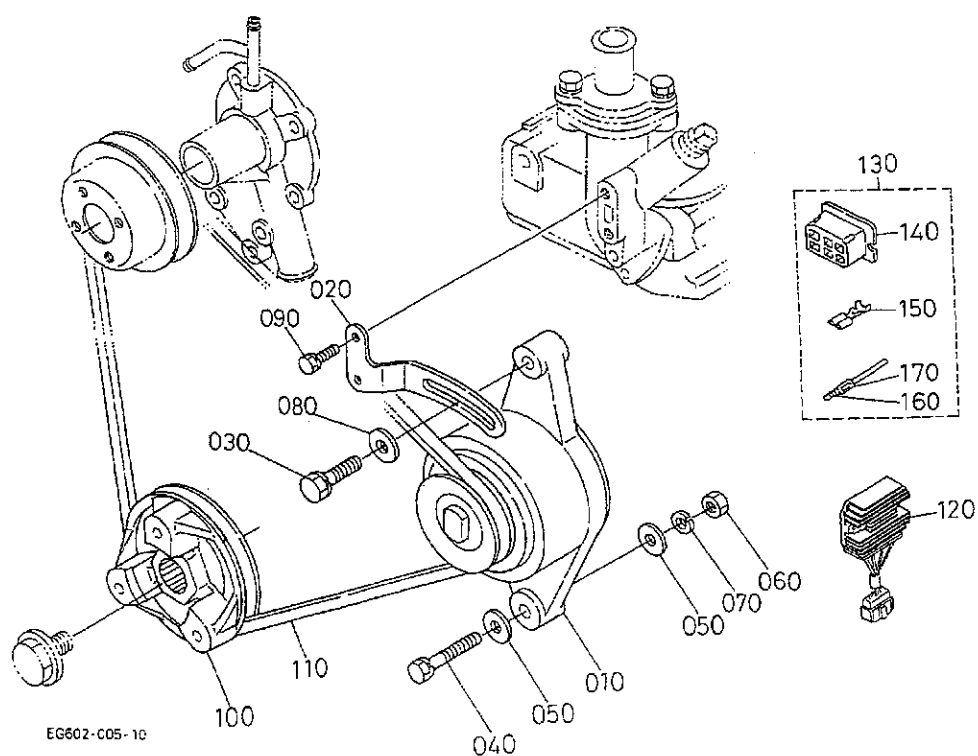


A:WG752-E2BBH

[illegible]

DYNAMO (COMPONENT PARTS)
DYNAMO (PARTIES COMPOSANTES)

STARTER (COMPONENT PARTS) DEMARREUR (PARTIES COMPOSANTES)

 **OIL SWITCH/THERMOMETER AND PLUG
CONTACT A HUILE THERMOMETRE ET OBTURATEUR**




010

[illegible]

↔ interchangeable; ≠ not interchangeable; ← new for old; → old for new

 WATER PIPE
TUYAU D'EAU

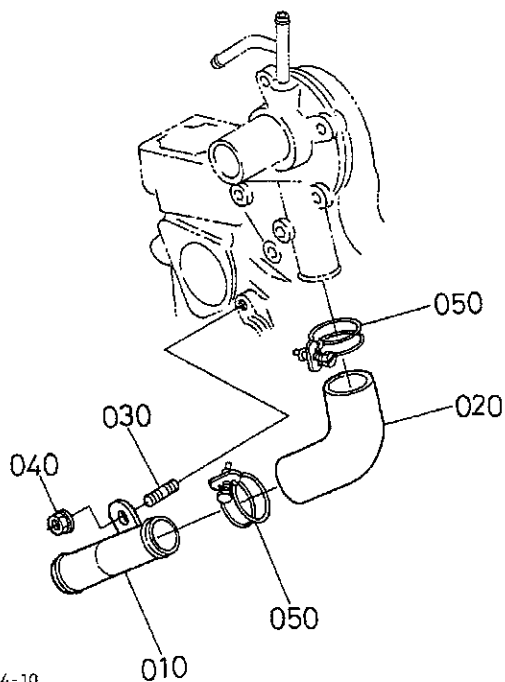


EG602-004-10

A:WG752-E2BBH

[illegible]

↔ interchangeable; ≠ not interchangeable; ← new for old; → old for new

 FAN
VENTILATEUR

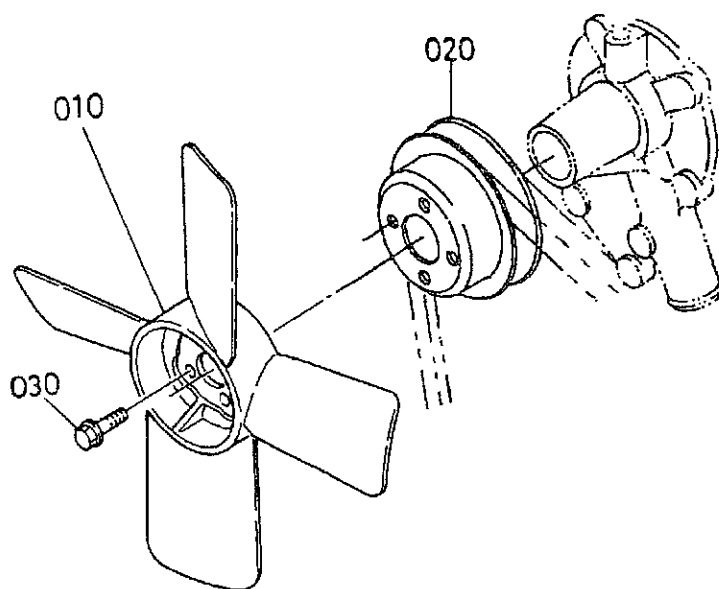


A:WG752-E2BBH

[illegible]

↔ interchangeable; ≠ not interchangeable; ← new for old; → old for new

 
INLET MANIFOLD
COLLECTEUR D'ADMISSION




A:WG752-E2BBH

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new



 
ACCESSORIES AND SERVICE PARTS
ACCESSOIRES ET PIÈCES DE SERVICE

[illegible]

 35

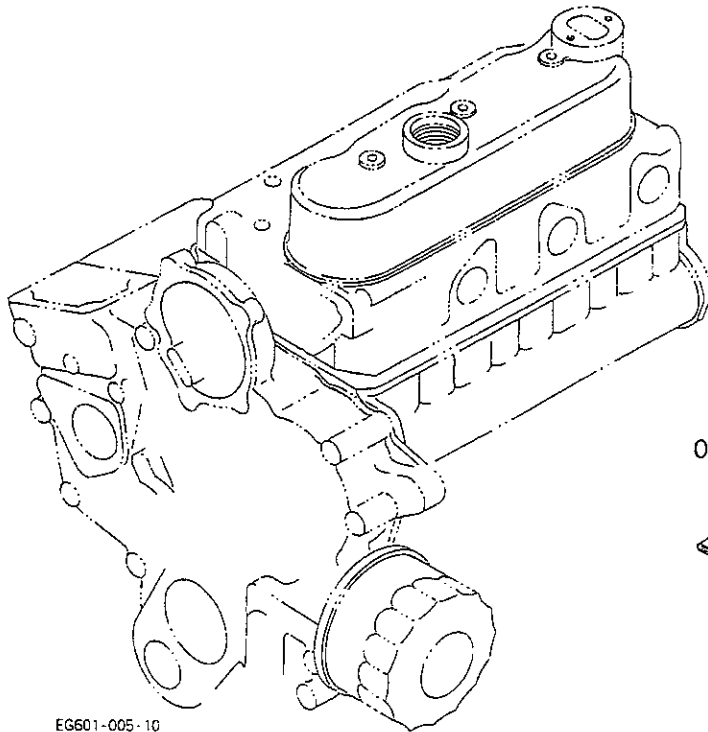

EG601-005-10

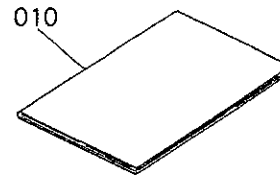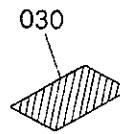   

A:WG752-E2BBH

[illegible]

↔ Interchangeable; ≠ not interchangeable; ← new for old; → old for new

NUMERICAL INDEX INDEX NUMERIQUE

PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.	PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.	PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.	PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.
E9151-3314-0.....5...130			01023-50622.....28...130			05411-00420.....32...170			12691-2105-3.....11...020		
EG261-0542-0.....5...040			29...080			05712-00408.....8...050			12691-2109-3.....11...020		
EG261-0551-2.....5...110			01023-50625.....33...060			05712-00515.....11...120			12691-5643-0.....19...030		
EG261-1151-0.....17...080			01023-50635.....5...060			14...100			12691-6751-0.....20...030		
35...030			18...070			05712-00518.....10...060			12691-6884-0.....20...150		
EG261-1160-3.....17...070			01023-50638.....29...090			07715-00801.....14...130			12691-7335-0.....28...070		
EG261-1450-0.....5...010			01023-50675.....4...130			07715-03207.....11...100			13641-5686-0.....19...080		
EG261-7337-2.....17...075			01023-60650.....4...100			07715-03211.....4...070			14601-0345-0.....3...100		
EG261-9149-0.....17...040			28...050			07715-03217.....14...150			14601-1311-0.....32...010		
EG266-5640-0.....19...010			33...050			08103-06203.....14...160			14601-1324-0.....32...030		
EG281-5166-0.....14...020			01023-60670.....4...120			08153-06203.....14...080			14601-1333-0.....32...040		
EG281-5634-0.....15...110			01053-50612.....14...030			11420-1315-0.....32...070			14601-1336-0.....32...050		
EG283-0446-0.....9...050			15...130			12035-4611-0.....17...030			14601-1424-0.....32...210		
EG283-5581-0.....15...030			01053-50622.....15...120			35...040			14601-1431-0.....32...180		
EG283-5582-0.....15...040			01123-50830.....23...030			12182-9331-0.....19...050			14601-1441-0.....32...130		
EG283-6772-0.....20...020			01123-60814.....2...070			12182-9341-0.....19...070			14601-2133-0.....11...040		
EG283-6865-0.....21...060			01123-60816.....3...020			12581-1171-0.....33...010			15221-0175-0.....3...010		
EG283-6880-0.....20...080			13...050			12581-1179-0.....33...080			15221-3365-0.....1...100		
21...010			22...020			12581-1182-0.....33...030			15221-3375-0.....2...030		
EG283-6883-0.....20...140			01153-50828.....25...020			12581-1183-0.....33...070			15231-3396-0.....1...110		
EG294-5611-0.....15...150			01153-50855.....23...040			12581-1184-0.....33...090			15241-3229-0.....4...030		
EG551-4472-0.....37...010			01513-50618.....34...040			12581-1312-0.....32...020			15261-0337-0.....3...050		
EG551-4492-0.....37...020			01513-50822.....34...060			12581-2131-0.....11...030			15261-2353-0.....11...160		
EG601-0304-0.....3...030			01518-50820.....19...120			12581-4301-2.....16...010			15261-2354-0.....11...170		
EG601-1171-0.....33...010			01754-50610.....31...030			12581-5165-0.....14...010			15261-2395-0.....11...160		
EG601-1182-0.....33...030			01759-50616.....34...030			12581-5583-0.....15...050			15261-2396-0.....11...160		
EG601-2111-0.....11...010			02014-50060.....19...060			12581-5585-0.....15...060			15261-2397-0.....11...170		
EG601-2191-0.....11...010			02056-50060.....32...140			12581-5587-0.....15...020			15261-2398-0.....12...170		
EG601-4401-0.....17...010			02156-50080.....15...160			12581-5604-0.....18...020			15261-5547-0.....14...140		
EG601-6752-0.....20...040			17...050			12581-5605-0.....18...010			15261-6641-0.....18...030		
EG601-6752-2.....20...040			02156-50080.....19...130			12581-5610-0.....15...010			15261-9203-0.....24...160		
EG601-6753-0.....20...050			23...060			12581-5615-0.....18...060			15261-9301-0.....24...090		
EG601-6753-2.....20...050			25...030			12581-5631-0.....15...070			15261-9402-0.....24...180		
EG601-6754-0.....20...060			25...050			12581-5633-0.....15...100			15261-9407-0.....24...170		
EG601-6754-2.....20...060			34...080			12581-5635-0.....15...190			15261-9601-0.....1...050		
EG601-7303-0.....29...010			02751-50060.....30...040			12581-5639-0.....15...200			3...060		
EG601-7334-0.....29...060			32...140			12581-5701-0.....19...040			15261-9616-0.....1...080		
EG601-7337-0.....28...080			02756-50060.....34...050			12581-5704-0.....19...090			15263-1237-0.....34...070		
EG601-8916-0.....36...010			02783-50100.....8...060			12581-5724-0.....19...100			15272-6759-0.....20...070		
EG601-8916-3.....36...010			03034-50510.....20...160			12581-6850-0.....21...020			15321-9626-0.....3...040		
EG601-9930-0.....35...020			04012-50060.....32...150			12581-6851-0.....21...040			15381-6404-0.....24...040		
EG601-9931-0.....35...020			04013-60080.....15...170			12581-6860-0.....21...030			15381-6407-0.....24...110		
EG601-9932-0.....35...020			22...030			12581-6863-0.....21...050			15381-6412-0.....24...020		
RP201-5371-0.....23...120			23...050			12581-6867-0.....21...070			15381-6415-0.....24...150		
01023-50610.....13...070			04015-60080.....19...110			12581-6882-0.....20...130			15381-6419-0.....24...140		
32...110			23...080			12581-6885-0.....13...060			15381-6429-0.....24...100		
01023-50612.....2...020			04512-60050.....18...040			12581-6890-0.....22...010			15381-6436-0.....24...080		
10...080			04512-60060.....32...160			12581-6892-0.....22...040			15381-7414-0.....24...070		
14...180			04512-60080.....15...180			12581-8620-0.....35...010			15451-9627-0.....1...040		
01023-50614.....10...140			17...060			12584-1603-0.....14...060			15481-7305-0.....29...040		
01023-50614.....14...050			04512-60080.....19...140			12584-1618-0.....14...070			15521-9361-0.....10...040		
19...150			23...070			12596-4615-0.....17...020			15521-9602-0.....1...060		
01023-50616.....17...110			25...040			12599-4681-0.....19...160			15521-9603-0.....1...070		
23...090			25...060			12599-6442-0.....23...020			15531-6401-6.....23...010		
28...040			34...090			12599-6771-0.....20...010			24...010		
33...100			04814-00160.....2...060			12599-8822-2.....36...020			15531-6411-0.....24...030		
01023-50618.....4...090			04814-06130.....4...140			12691-0101-3.....1...010			15531-7301-0.....28...100		
15...090			04814-16220.....12...200			12691-0331-0.....3...110			15531-7334-0.....33...020		
01023-50620.....9...070			04814-50300.....5...140			12691-0402-0.....4...010			15531-7418-0.....24...060		
01023-50622.....9...080			05012-00814.....1...090			12691-0462-0.....13...040			24...120		

NUMERICAL INDEX INDEX NUMERIQUE

PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.	PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.	PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.	PART No. REFERENCE	PAGE PAGE	REF. No. POS. No.
15531-9301-0	24	130	15852-6308-0	26	110	16851-9627-0	1	030			
15601-9665-0	5	100	15852-6320-0	26	160	16861-0405-0	9	110			
	14	040	15852-6324-0	26	050	16861-1452-2	5	020			
	15	140	15852-6325-0	26	170	16861-2301-0	11	090			
15694-2348-0	11	150	15852-6332-0	26	080	16861-2501-4	13	010			
15694-2393-0	11	150	15852-6336-0	26	120	16861-7428-0	23	100			
15694-2394-0	11	150	15852-6337-0	26	150	16871-1443-0	32	090			
15841-0409-0	9	010	15852-6338-0	26	130	16873-7270-4	28	010			
15841-0454-0	9	020	15852-6339-0	26	140	17331-5919-0	1	120			
	9	100	15852-6341-0	26	100	17472-1449-0	5	080			
15841-0454-0	9	120	15852-7352-0	29	020	17524-0513-0	5	050			
15841-0456-2	9	130	15852-7355-0	29	030	19237-6588-0	23	140			
15841-0481-0	9	040	15852-9331-0	26	180	19237-6591-0	23	150			
15841-0482-2	9	060	15853-3243-0	6	010	19298-9602-0	28	060			
15841-0567-0	5	070	15861-1426-3	32	080	19426-8788-0	36	030			
15841-1354-0	3	070	15861-1601-0	10	030	19428-6583-0	23	130			
15841-1356-0	3	080	15861-2201-0	11	050	19462-1231-2	34	010			
15841-1403-0	32	190	15861-2231-0	11	080	19837-6315-0	26	060			
15841-1423-0	32	200	15861-2297-0	11	080	19883-7351-0	29	050			
15841-1435-0	32	120	15861-2298-0	11	080	68271-6591-0	23	160			
15841-1462-0	5	090	15861-2347-0	11	130	68271-6592-0	23	170			
15841-1627-0	10	070	15861-2348-0	11	140	6C040-8286-0	24	050			
15841-1632-0	14	170	15861-2386-0	11	140	6C090-5896-0	2	040			
15841-1651-0	10	050	15861-2387-0	11	140						
15841-2198-0	11	060	15861-2391-0	11	130						
15841-2325-0	12	180	15861-2392-0	11	130						
15841-2411-0	11	110	15862-0150-0	2	010						
15841-3566-0	8	040	15862-0413-2	4	080						
15841-3693-0	4	060	15862-1235-0	34	020						
15841-3901-0	27	010	15875-2401-3	10	090						
15841-5115-0	14	090	15875-2425-0	10	130						
15841-5545-0	14	110	15875-2428-2	10	100						
15841-5569-0	14	120	15875-2432-0	10	120						
15841-5623-0	18	050	15875-2437-0	10	110						
15841-5721-2	15	080	15877-0414-0	4	150						
15841-7286-0	30	010	15881-2331-0	12	190						
15841-7292-2	28	030	15881-7287-0	30	020						
15841-7292-3	28	030	15881-7343-2	29	070						
15841-7296-0	30	050	15881-7411-0	31	010						
15841-7302-0	1	130	15881-9103-0	12	210						
15841-7326-0	28	110	15881-9701-0	23	110						
15841-7425-0	31	020	16241-7336-0	5	120						
15841-9101-0	4	110		28	090						
	33	040	16241-7337-0	28	020						
15841-9105-0	8	030	16264-5214-0	17	100						
15841-9151-0	30	030	16851-0404-0	9	090						
15841-9401-0	4	040	16851-1328-0	32	060						
15841-9402-2	32	100	16851-1511-0	10	020						
15841-9602-0	3	090	16851-1555-0	10	010						
15852-0436-0	9	030	16851-2214-0	11	070						
15852-2516-0	13	030	16851-3211-0	2	050						
15852-3314-0	5	130	16851-3501-0	8	010						
15852-5285-0	17	090	16851-3501-2	8	010						
15852-6301-0	25	010	16851-3515-2	8	020						
	26	010	16851-3641-0	7	010						
15852-6302-0	26	030	16851-3695-0	4	050						
15852-6303-0	26	040	16851-6382-2	13	020						
15852-6304-0	26	070	16851-7327-0	28	120						
15852-6305-0	26	020	16851-9601-0	4	020						
15852-6307-0	26	090	16851-9626-0	1	020						