

07. PFMW18



CLICK TO ORDER PARTS

shop.monsterjanitorial.com

TABLE OF CONTENTS

PFMW18 Cover Shot	3
PFMW18 Brushes	5
Pump Housing	7
Lever and Guide Link	10
Handle Assembly	12
Drive Side Housing	15
Accessories and Consumables	19
Accessories	21
Wiring Diagram	23
Motor, Drum, and Bridge Housing	25
Idle Side Housing	28

PFMW18 Cover Shot

 


Rendered by LeadVenture, Inc.

PFMW18 Cover Shot

Ref Number	Part Number	Part Description	Context Notes	Quantity
------------	-------------	------------------	---------------	----------


PFMW18 Brushes

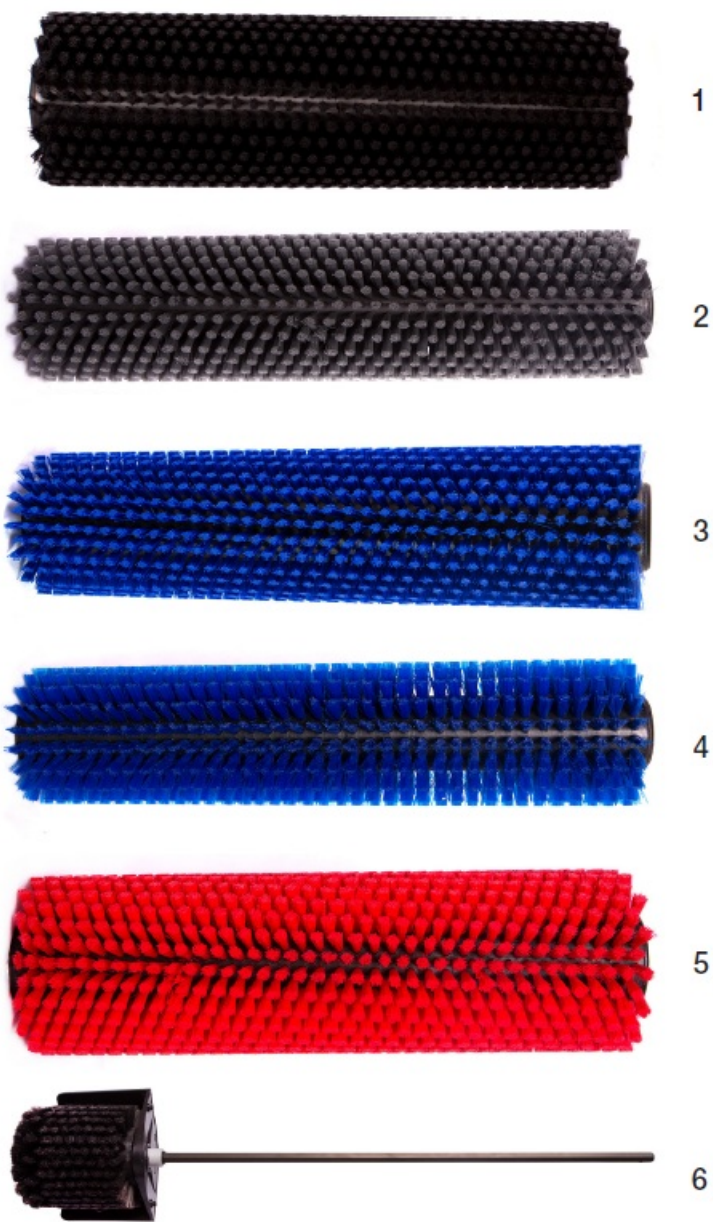

Revised by LeadVenture, Inc.

PFMW18 Brushes

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	PFMWSD18	Standard Brush (1 Pair)		1
2	PFMWSF18	Soft Brush (1 Pair)		1
3	PFMWHBD18	Hard Brush (1 Pair)		1
4	PFMWEB18	Escalator Brush (1 Pair)		1
5	PFMWCB18	Carpet Brush (1 Pair)		1
6	33991	Side Brush (For 18" Unit)		1

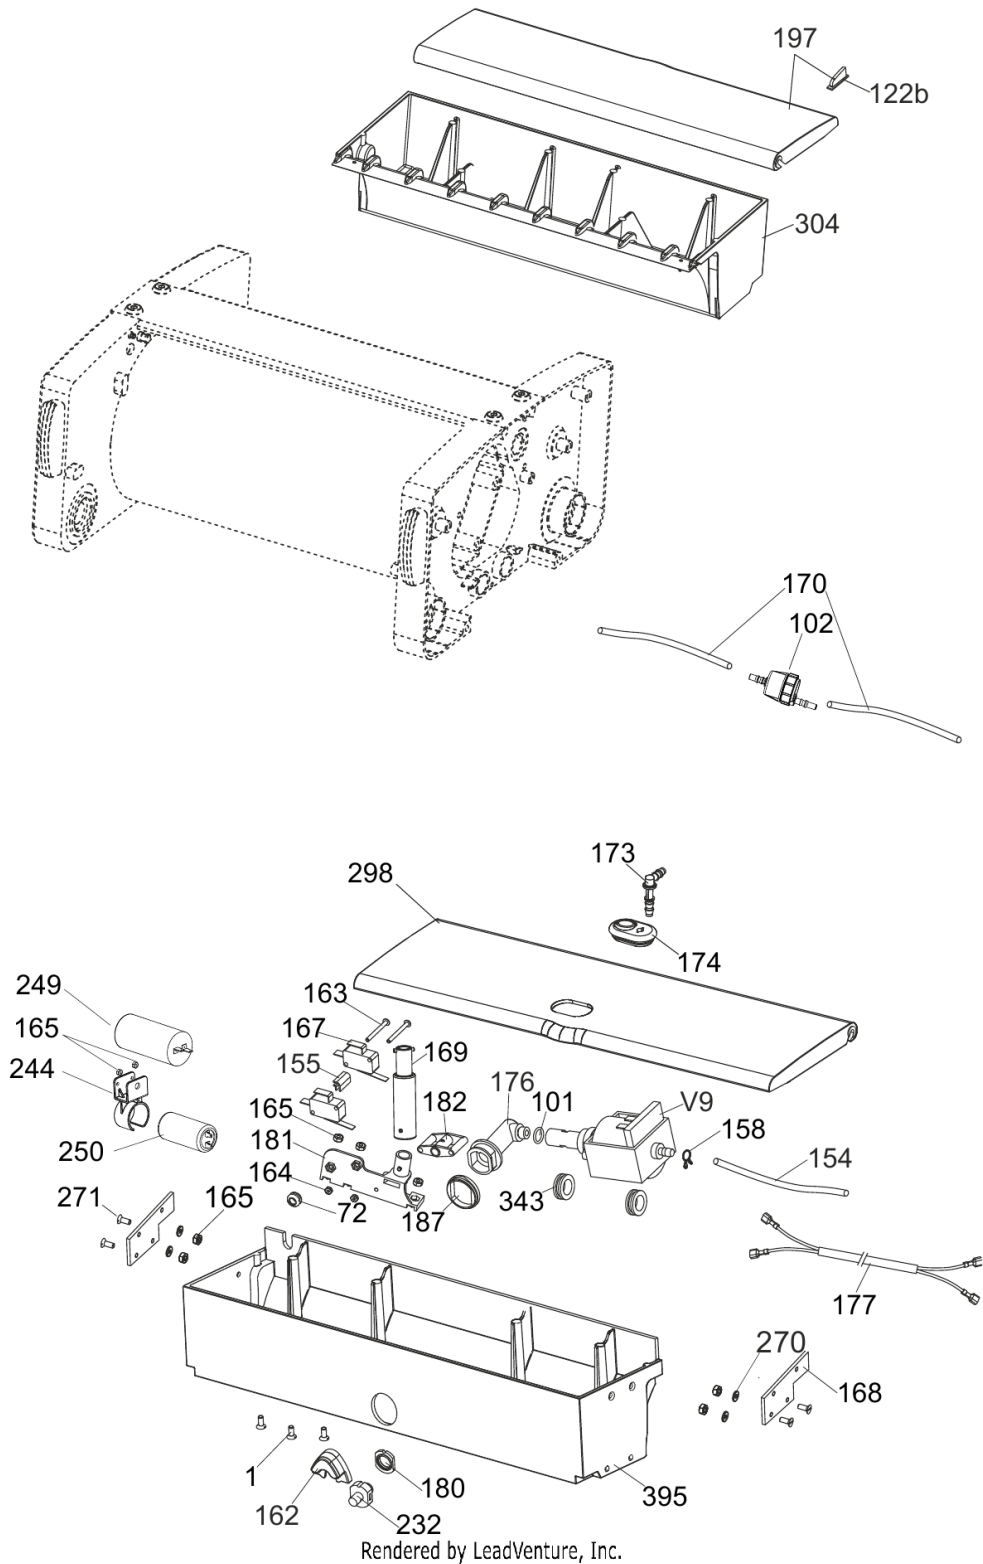 


Pump Housing

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	90-0258-0000	Screw M4 x 10		3
72	90-0045-0000	Grommet		1
101	90-0100-0000	O-Ring		1
102	90-0113-0000	Solution Filter		1
122b	90-0055-0000	Recovery Tank Lid Pad		2
154	90-0104-0000	Hose		1
155	90-0227-0000	Insulation		1
158	90-0353-0000	Hose Clip		1
162	90-0112-0000	Boot		1
163	90-0138-0000	Screw M3 x 30		2
164	90-0140-0000	Nut		2
165	90-0141-0000	Nut		7
167	90-0057-0000	Switch		2
168	90-0349-0000	Lid Plate		2
169	90-0350-0000	Extension Bushing		1
170	90-0403-0000	Hose		2
173	90-0404-0000	Hose Connector		1
174	90-0405-0000	Lid Boot		1

Ref Number	Part Number	Part Description	Context Notes	Quantity
176	90-0094-0000	Nozzle Adaptor		1
177	90-0344-0000	Cable		1
180	90-0093-0000	Nozzle Seal		1
181	90-0209-0000	Switch Base		1
182	90-0212-0000	Lever		1
187	90-0099-0000	Spacer		1
197	90-0407-0000	Recovery Tank Lid		1
232	90-0453-0000	Spray Nozzle		1
244	33872	Capacitor Clamp		1
249	90-0664-0000	Capacitor 60 MFD		1
250	55-3250-3810	Starting Capacitor 200-250 MFD		1
270	90-0646-0000	Washer		4
271	55-2120-0090	Screw M4 x 15		4
298	55-8251-3920	Pump Housing Lid		1
304	55-8251-3860	Complete Recovery Tank		1
343	90-0559-0000	Support Ring		2
395	55-3250-6160	Pump Housing		1
V9	33880	Pump		1


 
Lever and Guide Link

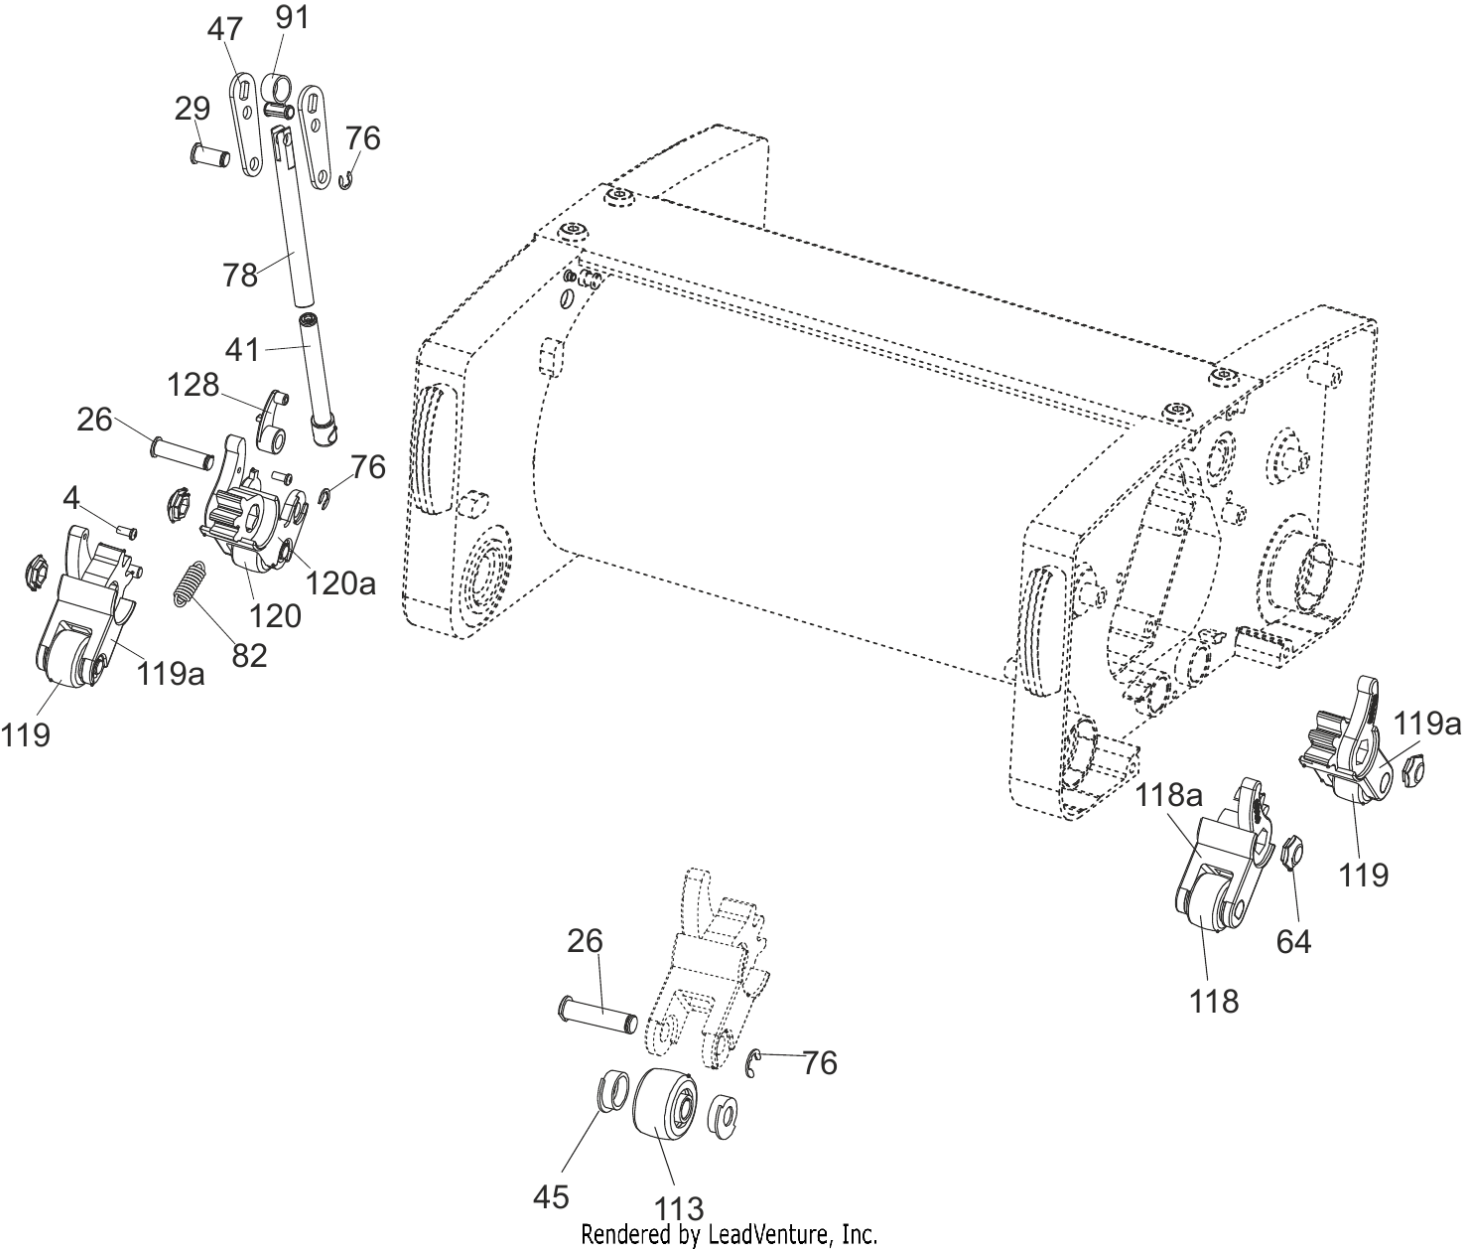

Lever and Guide Link

Ref Number	Part Number	Part Description	Context Notes	Quantity
4	90-0046-0000	Screw M4 x 12		2
26	90-0151-0000	Clevis Pin		5
29	90-0153-0000	Clevis Pin		1
41	90-0159-0000	Linkage		1
45	90-0162-0000	Shield		8
47	90-0163-0000	Lever		2
64	90-0177-0000	Button		4
76	90-0051-0000	Circlip		6
78	90-0186-0000	Linkage Guide		1
82	90-0284-0000	Spring		1
91	90-0257-0000	Bushing		1
113	90-0196-0000	Wheel		4
118	90-0068-0000	Lever Assembly		1
118a	90-0173-0000	Lever		1
119	90-0069-0000	Lever Assembly		2
119a	90-0174-0000	Lever		2
120	90-0070-0000	Lever Assembly		1
120a	90-0175-0000	Lever		1
128	90-0266-0000	Switch Lever		1

  Handle Assembly

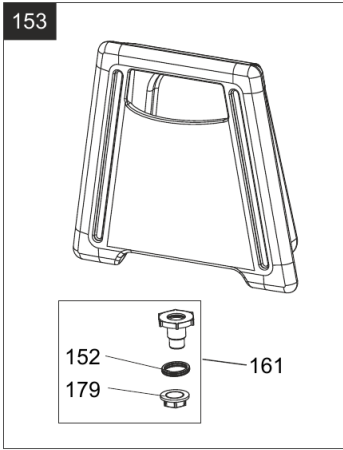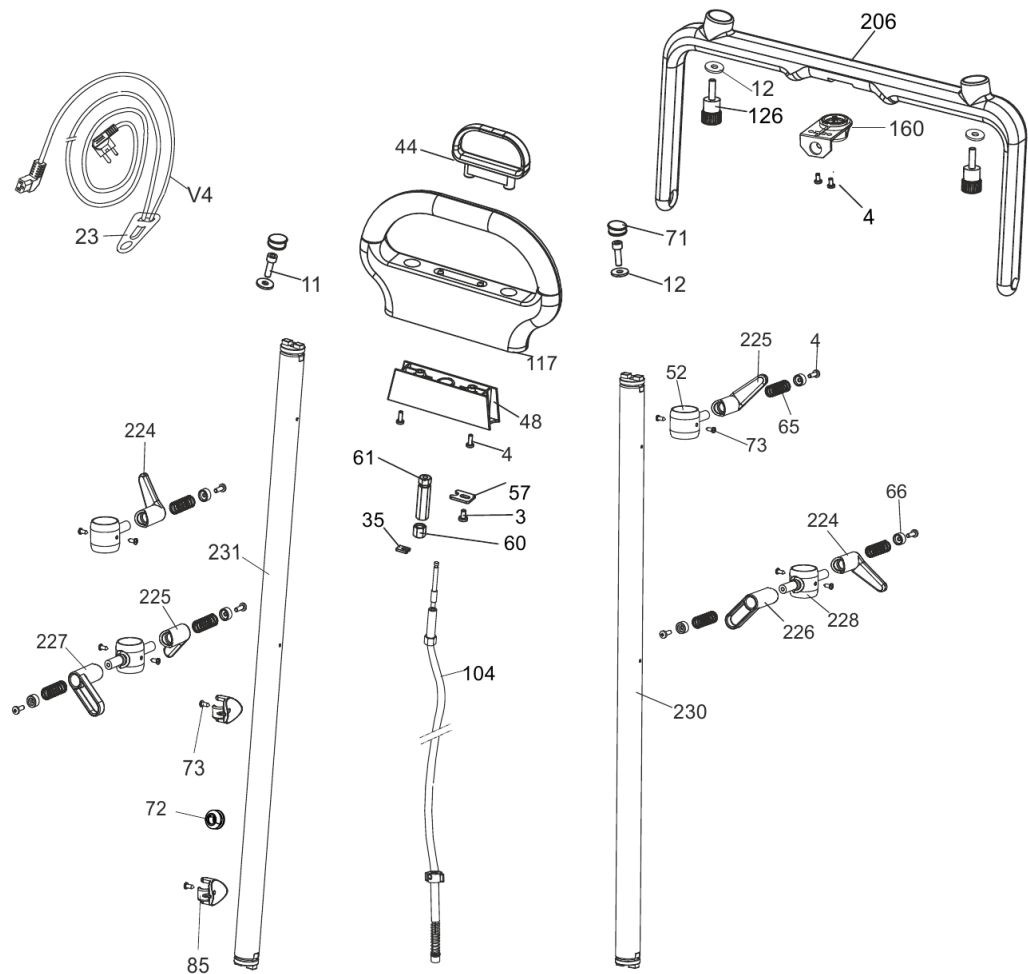




Rendered by LeadVenture, Inc.

Handle Assembly

Ref Number	Part Number	Part Description	Context Notes	Quantity
3	90-0002-0000	Screw M4 x 8		1
4	90-0046-0000	Screw M4 x 12		10
11	90-0005-0000	Screw M6 x 20		2
12	90-0006-0000	Washer		4
23	90-0010-0000	Cable Retainer		1
35	90-0018-0000	Clamp		1
44	90-0026-0000	Pull Handle		1
48	90-0165-0000	Cap		1
52	90-0168-0000	Cable Holder Base		2
57	90-0032-0000	Clamp		1
60	90-0038-0000	Nut		1
61	90-0039-0000	Sleeve		1
65	90-0041-0000	Spring		6
66	90-0042-0000	Washer		6
71	90-0044-0000	Handle Plug		2
72	90-0045-0000	Grommet		1
73	90-0183-0000	Self Tapping Screw		10
85	33882	Cable Guide		2

Ref Number	Part Number	Part Description	Context Notes	Quantity
104	90-0347-0000	Pull Cable		1
117	90-0067-0000	Top Handle		1
126	90-0296-0000	Knob		2
152	90-0101-0000	Gasket		1
153	90-0103-0000	Solution Tank		1
160	90-0110-0000	Base Valve Assembly		1
161	90-0111-0000	Valve		1
179	90-0092-0000	Nut		1
206	90-0413-0000	Bottom Handle		1
224	90-0402-0000	Cable Holder II Knob		2
225	90-0429-0000	Cable Holder I Knob		2
226	90-0443-0000	Tank Holder Knob LH		1
227	90-0444-0000	Tank Holder Knob RH		1
228	90-0445-0000	Tank and Cable Holder Base		2
230	90-0451-0000	Handle Pipe LH		1
231	90-0452-0000	Handle Pipe RH		1
V4	33883	Power Cord 16/3 40'		1

   Drive Side Housing

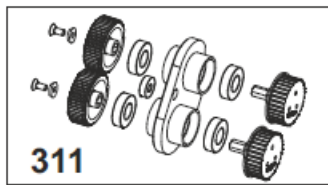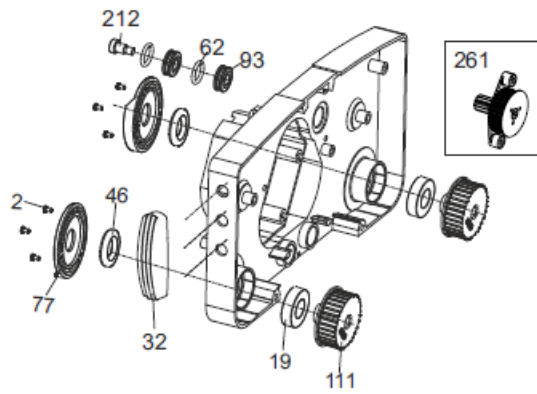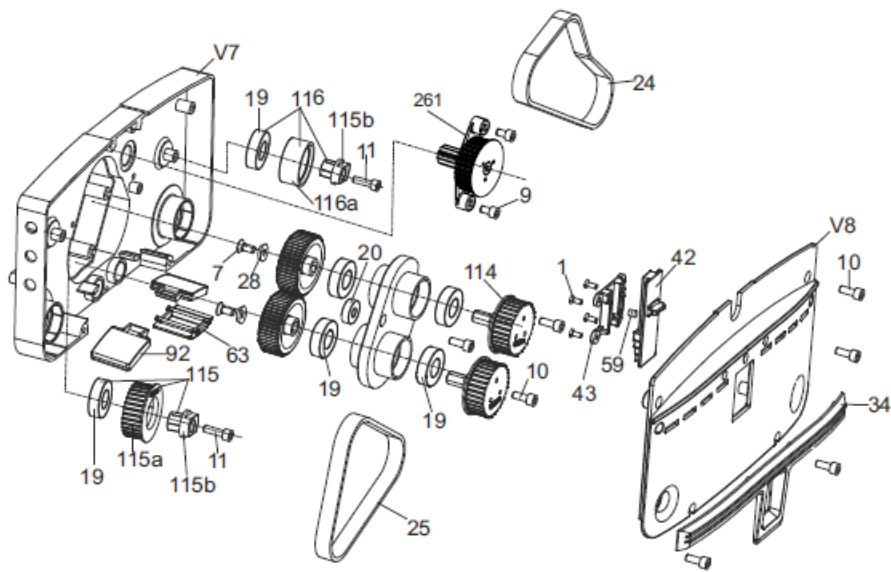

NOTE: Item no 9 is not included in assy 261.

Rendered by LeadVenture, Inc.

Drive Side Housing

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	90-0258-0000	Screw M4 x 10		4
2	90-0001-0000	Screw M3 x 6		6
7	90-0143-0000	Screw M6 x 14		2
9	90-0293-0000	Allen Screw M6 x 10		2
10	90-0144-0000	Allen Screw M6 x 16		7
11	90-0005-0000	Screw M6 x 20		2
19	CAS88	Bearing 6003-2RS		8
20	90-0598-0000	Motor Shaft Guide Bushing		1
24	90-0011-0000	Belt 500 5 M		1
25	90-0012-0000	Belt 425 5 M		1
28	90-0152-0000	Washer		2
32	90-0154-0000	Bumper		1
34	90-0156-0000	Bumper		1
42	90-0024-0000	Brush Slider Blue		1

Ref Number	Part Number	Part Description	Context Notes	Quantity
43	90-0025-0000	Slider Housing		1
46	90-0027-0000	Seal		2
59	90-0035-0000	Pin		1
62	90-0176-0000	O-Ring		2
63	90-0040-0000	Shield		1
77	90-0020-0000	Cap		2
92	90-0267-0000	Shield		2
93	90-0294-0000	Roller		2
111	90-0061-0000	Brush Sprocket	Use Loctite 638 for Correct Fitting	2
114	90-0063-0000	Gear Sprocket		2
115	90-0065-0000	Idler Assembly		1
115a	90-0169-0000	Sprocket		1
115b	90-0161-0000	Hub		1

Ref Number	Part Number	Part Description	Context Notes	Quantity
116	90-0197-0000	Idler Assembly		1
116a	90-0166-0000	Sleeve		1
212	90-0392-0000	Stub Axle		1
261	90-0652-0000	Drum Pinion Assembly		1
311	925530A	Complete Gear Replacement Assy New		1
V7	55-8250-562	Black Housing, Drive Side, 99410 and PFMW14		1
V8	55-8250-5740	Cover Assembly		1

Accessories and Consumables

1



2



3



4



5



6



Rendered by LeadVenture, Inc.

Accessories and Consumables

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	PFMWSD18	Standard Brush (1 Pair)		
2	PFMWSF18	Soft Brush (1 Pair)		
3	PFMWHBD18	Hard Brush (1 Pair)		
4	PFMWEB18	Escalator Brush (1 Pair)		
5	33991	Side Brush (For 18" Unit)		
6	05-4781-0000	Transport Cart for Multiwash & Vortex		

Accessories


Accessories

Rendered by LeadVenture, Inc.

Accessories

Ref Number	Part Number	Part Description	Context Notes	Quantity
	33985	Standard Cylindrical Brush 18"		2
	33986	Soft Cylindrical Brush 18"		2
	33987	Hard Cylindrical Brush 18"		2
	33988	Escalator Cylindrical Brush 18"		2
	33989	Cylindrical Carpet Brush 18"		2
	33991	Side Brush (For 18" Unit)		1
	05-4781-0000	Transport Cart for Multiwash & Vortex		1

 Wiring Diagram

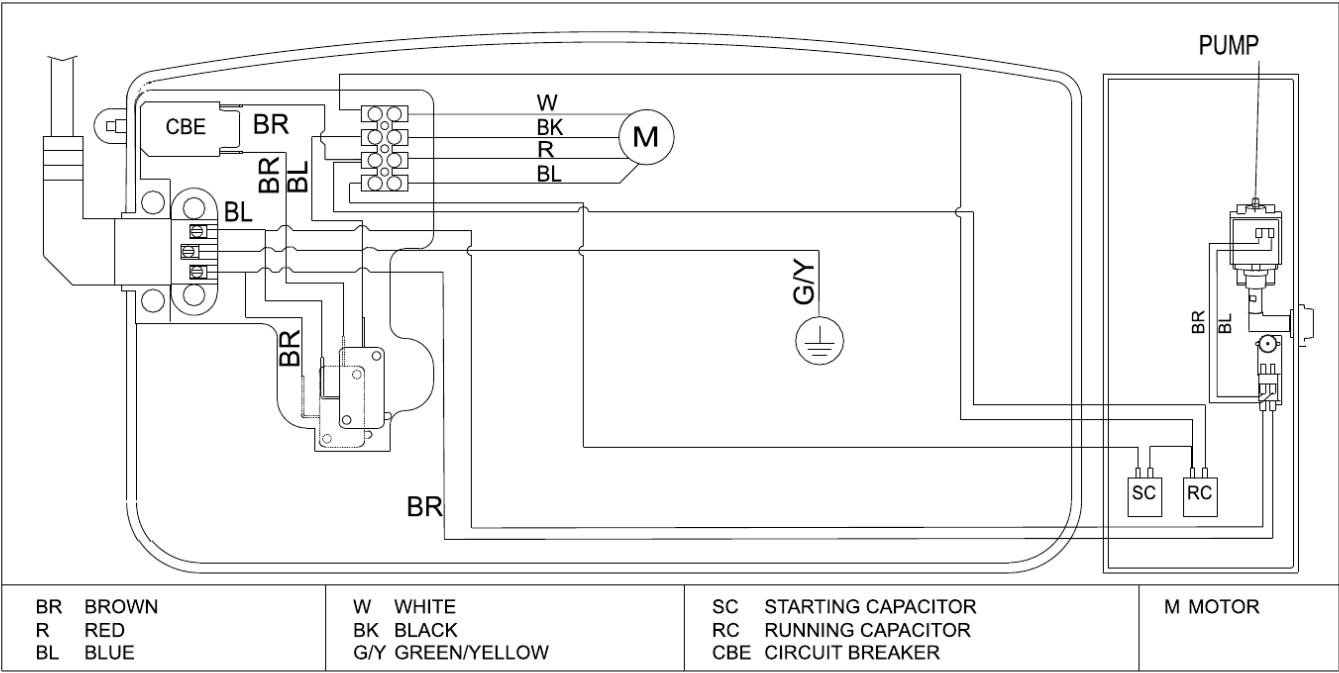


Electrical Layout For Pump 110V Model
Rendered by LeadVenture, Inc.

Wiring Diagram

Ref Number	Part Number	Part Description	Context Notes	Quantity
------------	-------------	------------------	---------------	----------

 Motor, Drum, and Bridge Housing


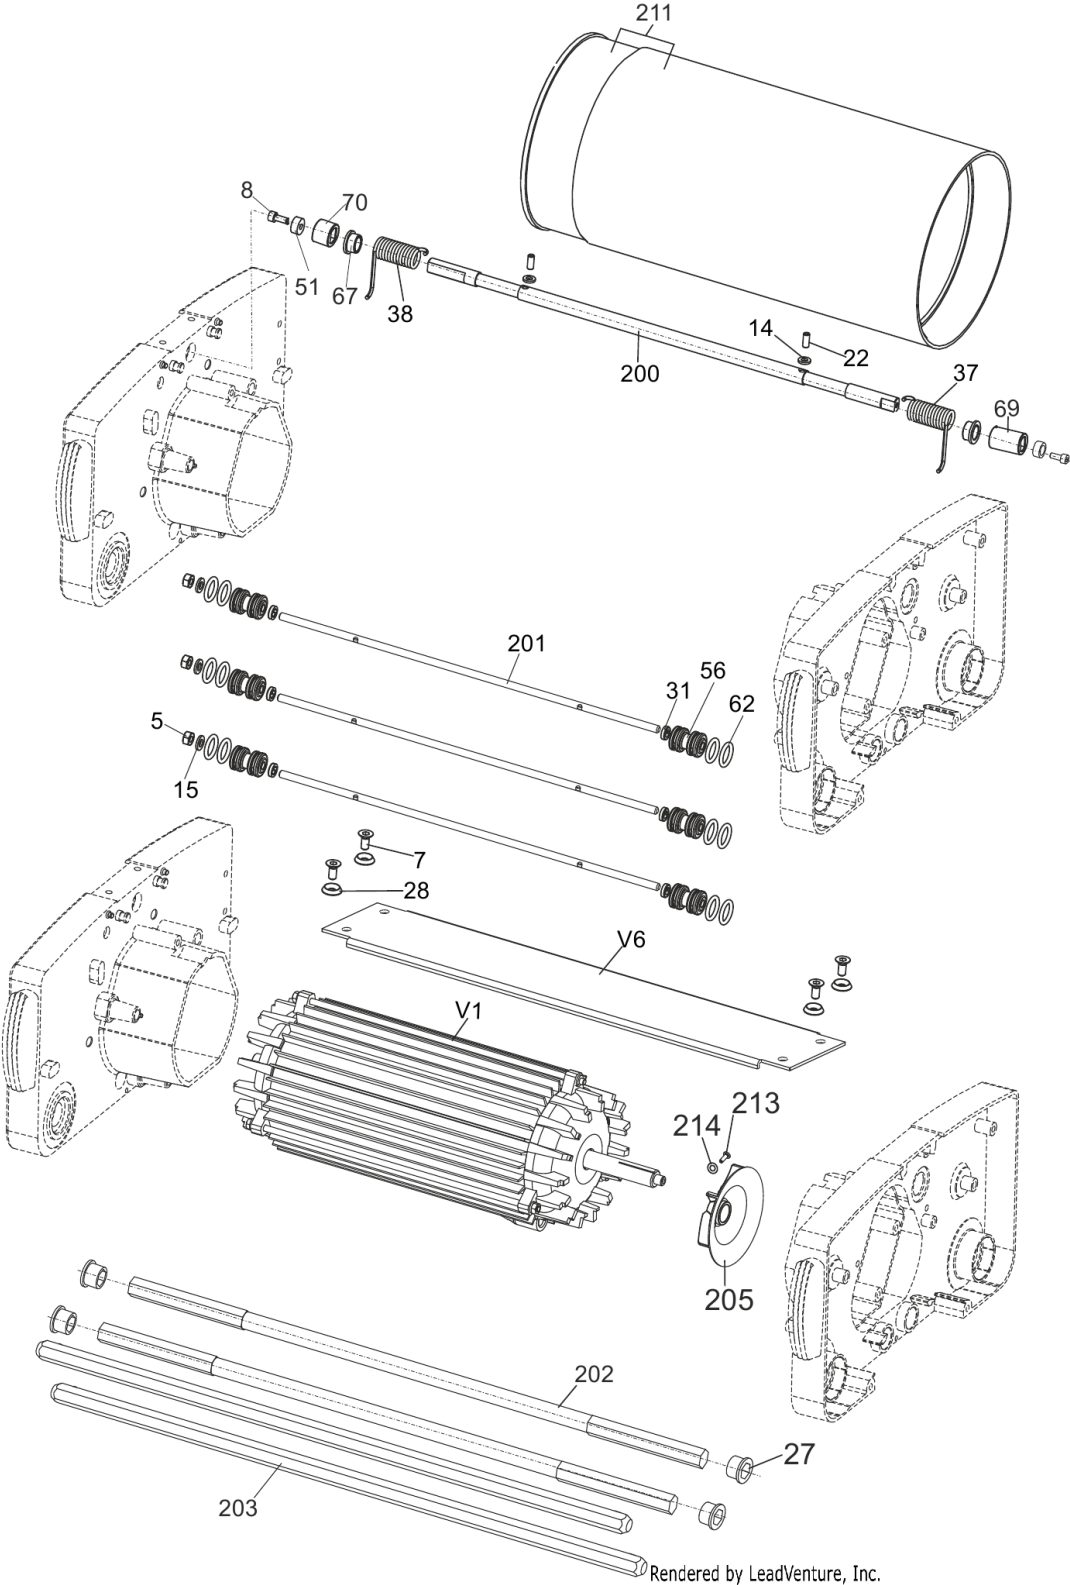


Rendered by LeadVenture, Inc.

Motor, Drum, and Bridge Housing

Ref Number	Part Number	Part Description	Context Notes	Quantity
5	90-0142-0000	Nut		4
7	90-0143-0000	Screw M6 x 14		2
8	90-0004-0000	Screw M4 x 10		2
14	90-0146-0000	Washer		3
15	90-0147-0000	Washer		2
22	90-0150-0000	Set Screw M5 x 12		4
27	90-0015-0000	Bushing		4
28	90-0152-0000	Washer		6
31	90-0017-0000	Washer		1
37	90-0157-0000	Handle Spring LH		1
38	90-0158-0000	Handle Spring RH		1
51	90-0030-0000	Washer		6
56	90-0172-0000	Roller		12
62	90-0176-0000	O-Ring		2
67	90-0178-0000	Bushing		1
69	90-0180-0000	Bushing		1
70	90-0181-0000	Bushing		1
200	90-0414-0000	Shaft		3

Ref Number	Part Number	Part Description	Context Notes	Quantity
201	90-0415-0000	Tie Rod		2
202	90-0416-0000	Shaft		2
203	90-0417-0000	Brush Shaft		2
205	90-0418-0000	Motor Fan Dust Shield		1
211	90-0419-0000	Complete Drum Assembly		1
213	90-0422-0000	Screw M3		1
214	90-0423-0000	Spring Washer		1
V1	55-8250-2660	Motor 115V/60Hz		1
V6	90-0426-0500	Bridge Housing Assembly		1

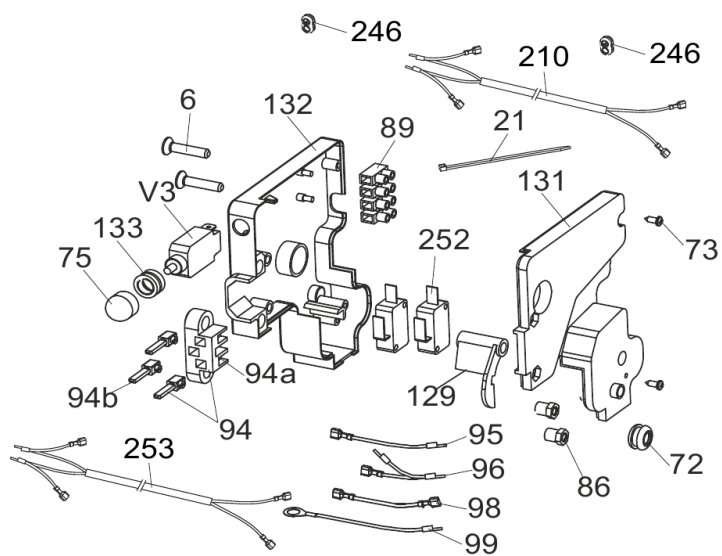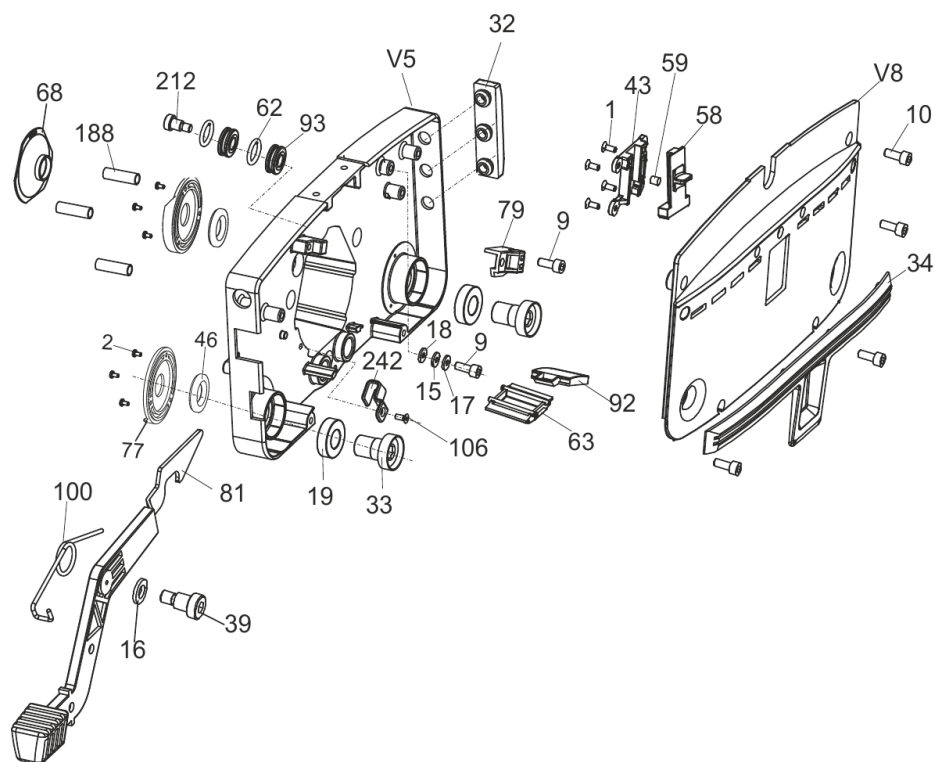  

Page 28 of 32 07. PFMW18

Idle Side Housing

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	90-0258-0000	Screw M4 x 10		4
2	90-0001-0000	Screw M3 x 6		6
6	90-0261-0000	Screw M5 x 25		2
9	90-0293-0000	Allen Screw M6 x 10		1
10	90-0144-0000	Allen Screw M6 x 16		5
15	90-0147-0000	Washer		1
16	90-0395-0000	Washer		1
17	90-0298-0000	Spring Washer		1
18	90-0148-0000	Toothed Washer		1
19	CAS88	Bearing 6003-2RS		2
21	90-0149-0000	Wire Tie		2
32	90-0154-0000	Bumper		1
33	90-0155-0000	Bushing		2
34	90-0156-0000	Bumper		1
39	90-0123-0000	Stub Axle		1
43	90-0025-0000	Slider Housing		1
46	90-0027-0000	Seal		2
58	90-0033-0000	Transport Slider		1

Ref Number	Part Number	Part Description	Context Notes	Quantity
59	90-0035-0000	Pin		1
62	90-0176-0000	O-Ring		2
63	90-0040-0000	Shield		1
68	90-0179-0000	Fan Cover		1
72	90-0045-0000	Grommet		1
73	90-0183-0000	Self Tapping Screw		2
75	90-0048-0000	Cap		1
77	90-0020-0000	Cap		2
79	90-0188-0000	Stopper		1
81	90-0259-0000	Pedal		1
86	90-0297-0000	Nut		2
89	90-0269-0000	Terminal Board 2 x 4		1
92	90-0267-0000	Shield		1
93	90-0294-0000	Roller		2
94	90-0290-0000	Socket Assembly		1
94a	90-0291-0000	Socket		1
94b	90-0292-0000	Terminal		3
95	90-0278-0000	Cable		2

Ref Number	Part Number	Part Description	Context Notes	Quantity
96	90-0279-0000	Cable		1
98	90-0281-0000	Cable		1
99	90-0282-0000	Cable		1
100	90-0260-0000	Pedal Spring		1
106	90-0396-0000	Screw M4 x 8		1
129	90-0265-0000	Switch Lever		1
131	90-0262-0000	Top Insulation		1
132	90-0263-0000	Bottom Insulation		1
133	90-0295-0000	Nut		1
188	90-0397-0000	Tie Rod Sleeve		3
210	90-0411-0000	Cable		1
212	90-0392-0000	Stub Axle		1
242	553250272-00	Wire Clamp		1
246	90-0477-0000	Grommet		2
252	33866	Switch 21A		2
253	55-8251-0250	Cable		1
V3	90-0318-0000	Circuit Breaker 10A		1
V5	55-8250-5630	Idle Side Housing w/Wear Pad		1

Ref Number	Part Number	Part Description	Context Notes	Quantity
V8	55-8250-5740	Cover Assembly		1