

Spare parts list



GS Ecobot
40



CLICK TO ORDER PARTS



Table of contents

TASKI GS Ecobot 40	3
--------------------	---

TASKI GS Ecobot 40

Article no.	Description	Quantity	Unit
4135282	Front Block Rubber	1	PC
4135283	Rear Block Rubber	1	PC
4135284	Side Block Rubber	1	PC
4135285	Toothed belt 315-S5M	1	PC
4135286	Castor	1	PC
4135331	Caster 3 Inch	2	PC
4135332	Sleeve	1	PC
4135333	Sleeve	1	PC
4135334	Lifting wire ropes	1	PC
4135335	Wire rope clamp	1	PC
4135336	Pulley	1	PC
4135337	Tension spring	1	PC
4135339	Tension spring	1	PC
4135340	Compression spring	1	PC
4135341	Buckle	1	PC
4135342	Hinge	1	PC
4135343	Guide rod	1	PC
4135344	Permanent magnet	1	PC
4135345	Circular magnet	1	PC
4135346	Fixing plate	1	PC
4135347	Handle sleeve	1	PC
4135348	Dust mop components	1	PC
4135349	Latch lock limit socket	1	PC
4135350	Side housing hinge	1	PC
4135351	Touch the bead hinge	1	PC
4135352	Rk3399 Pro IPC	1	PC
4135353	Lidar	1	PC
4135354	Dabai camera components	1	PC
4135355	Brushless drive	1	PC
4135356	Vacuum motor	1	PC
4135357	Brush motor	1	PC
4135358	Actuator-Dust mop	1	PC
4135359	Aktuator	1	PC
4135398	Denoise main brush motor	1	PC