
93220 EB 30/1 Electric Broom



TABLE OF CONTENTS

Main Assembly		3
Standard Accessories		5
Product Optional Item	ns ·····	7
Replacement Items		9

Main Assembly

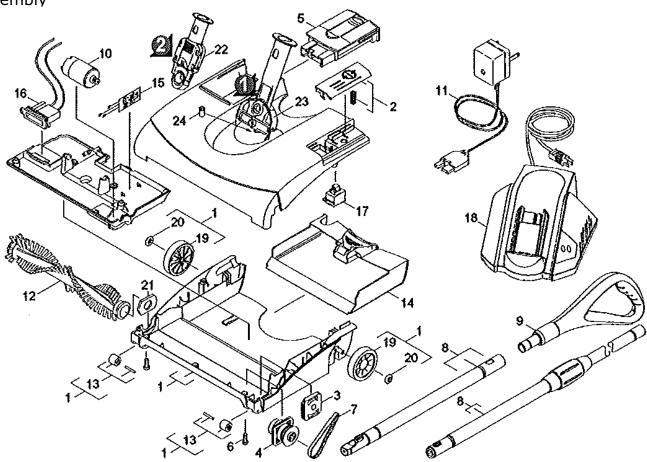

Page 3 of 10 93220 EB 30/1 Electric Broom

Main Assembly

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	K40810020	Complete Bottom Part		1
2	K43240240	Pushbutton w/Spring		1
3	K52501470	Right Bearing		1
4	K44540010	Transmission		1
6	K73031290	Screw M4 x 16		11
7	K63484270	Belt		1
8	K40705980	Complete Tube		1
9	K40706060	Hand Grip		1
10	K46237500	Motor		1
11	K66458390	Wall Plug Charger for Li-Ion Battery Eb 30/1		1
12	K47624000	Black Roller Brush		1
12	K47624010	Red Roller Brush		1
13	K48800580	Front Wheel and Axle (Set of 2)		1
14	K40705880	Complete Sweep Tank		1
15	K46820920	Complete Electronics		1
16	K48224340	Electrical Plug		1
17	K66304130	Switch		1
18	K66541970	Quick Charger		1
19	K55152760	Wheel		2
20	K63431870	Lock Washer		2
21	K50087750	Left Bearing Plate		1
22	K46721810	Locking Part		1
23	K56053140	Joint		1
24	K41100130	Thrust Piece		1

No Diagram Available

Parts List Only

Standard Accessories

Ref Number	Part Number	Part Description	Context Notes	Quantity
2	K47624000	Black Roller Brush	For textile & hard surfaces	1
3	K66458390	Wall Plug Charger for Li-Ion Battery Eb 30/1	0.1 A-h	1

Product Optional Items





Product Optional Items

Product Optional Items

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	K47624010	Red Roller Brush	For abrasive floors (e.g. needled felt)	
3	K66541970	Quick Charger	Quick-charger for 1 battery	

No Diagram Available

Parts List Only

Replacement Items

Ref Number	Part Number	Part Description	Context Notes	Quantity
1	K47624000	Black Roller Brush		