




COBRA®-H EXTRACTOR

240V

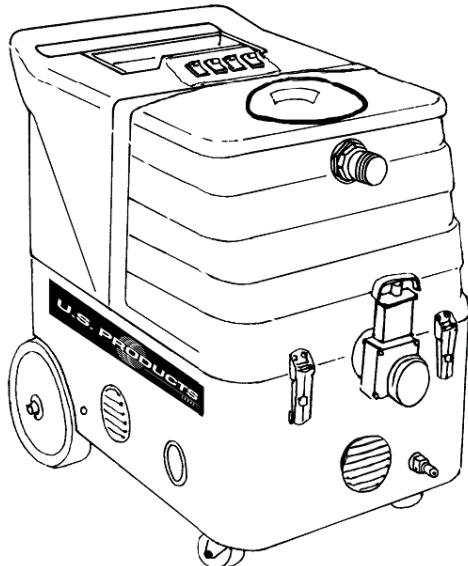

INFORMATION & OPERATING INSTRUCTIONS



**CAUTION: DO NOT OPERATE MACHINE UNTIL YOU HAVE
READ ALL SECTIONS OF THIS INSTRUCTION MANUAL**



1. Always use a defoamer when foaming occurs to prevent vacuum motor damage.
2. Keep machine from rain and snow, extremes in temperatures, and store in a heated location. Use the machine indoors. Do not use outdoors.
3. Do not let the pump run dry.
4. Use approved chemicals only. NO SOLVENTS.
5. Wear gloves or use rags when removing quick disconnects to prevent burns.
6. Never use water above 54 °C/130 °F in the solution tank.

IMPORTANT SAFETY INSTRUCTIONS

This machine is only suitable for commercial use, for example in hotels, schools, hospitals, factories, shops and offices other than normal residential housekeeping purposes.

When using any electrical appliance, basic precautions should always be followed, including the following:

NOTE: Read all instructions before using this machine.

WARNING!

To reduce the risk of fire, electric shock, or injury:

- Do not leave the machine unattended when it is plugged in. Unplug the unit from the outlet when not in use and before servicing.
- To avoid electric shock, do not expose to rain or snow. Store, and use, indoors.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only the manufacturer's recommended attachments.
- Never add water over 54° C/130° F to the solution tank.
- Do not use with damaged cord or plug. If the machine is not working as it should, has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the machine over the cord. Keep the cord away from heated surfaces. To unplug, grasp the plug, not the cord.
- Do not handle the plug, the cord, or the machine with wet hands.
- Extension cords must be 12/3 and no longer than 15 M. Replace the cord or plug immediately if the ground prong becomes damaged.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep loose clothing, hair, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes, or any health endangering dusts. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Connect to a properly grounded outlet only.
- Liquid ejected at the spray nozzle could be dangerous as a result of its temperature, pressure, or chemical content.

INSPECTION:

Carefully unpack and inspect your COBRA-H for shipping damage. Each machine is tested and inspected before shipping. Any shipping damage incurred is the responsibility of the carrier. You should notify the carrier immediately if you notice damage to the box or to the machine or parts.

CLEANING SOLUTIONS:

We recommend liquid cleaning chemicals. Powder chemicals may be used, but unless mixed very thoroughly they could cause a build-up in the pump, lines, heat exchanger and/or quick disconnects. Any problem caused by a chemical build-up is not covered by warranty. Use a neutral cleaner with a pH between 5 and 10 to avoid premature wear of the pump, seals, and/or other components. Damage caused by the use of strong chemicals is not covered by the warranty.

MAINTENANCE:

For optimum performance flush the machine with clear water at the end of each working day. Once a month, minimum, run a flushing compound through the machine to break up any mineral or chemical build-up that may have formed. The vacuum motors and the pump do not require any scheduled maintenance; however, the vacuum motors may require replacement brushes after 1000 - 1500 hours. Clean the body with an all purpose detergent, and protect it with an automobile interior polish. Lubricate the wheels, castors, and quick disconnects with an all purpose silicone spray.

RECORD AND KEEP THE FOLLOWING INFORMATION

Serial Number: _____


Model: **COBRA-H-240**

Purchase Date: _____

Write the name and phone number of your distributor:

(And don't forget to register your purchase to activate your warranty)


SWITCH PLATE

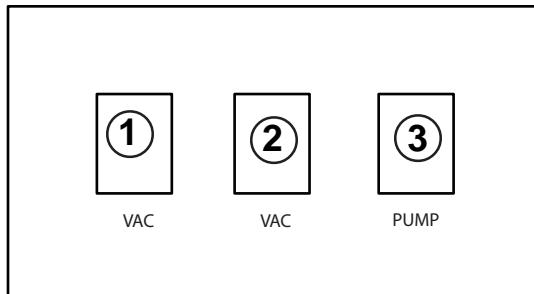

VACUUM (1), VACUUM (2), AND PUMP (3) SWITCHES:

These switches are all powered by cord #1. Switches are on when illuminated.

COBRA-H

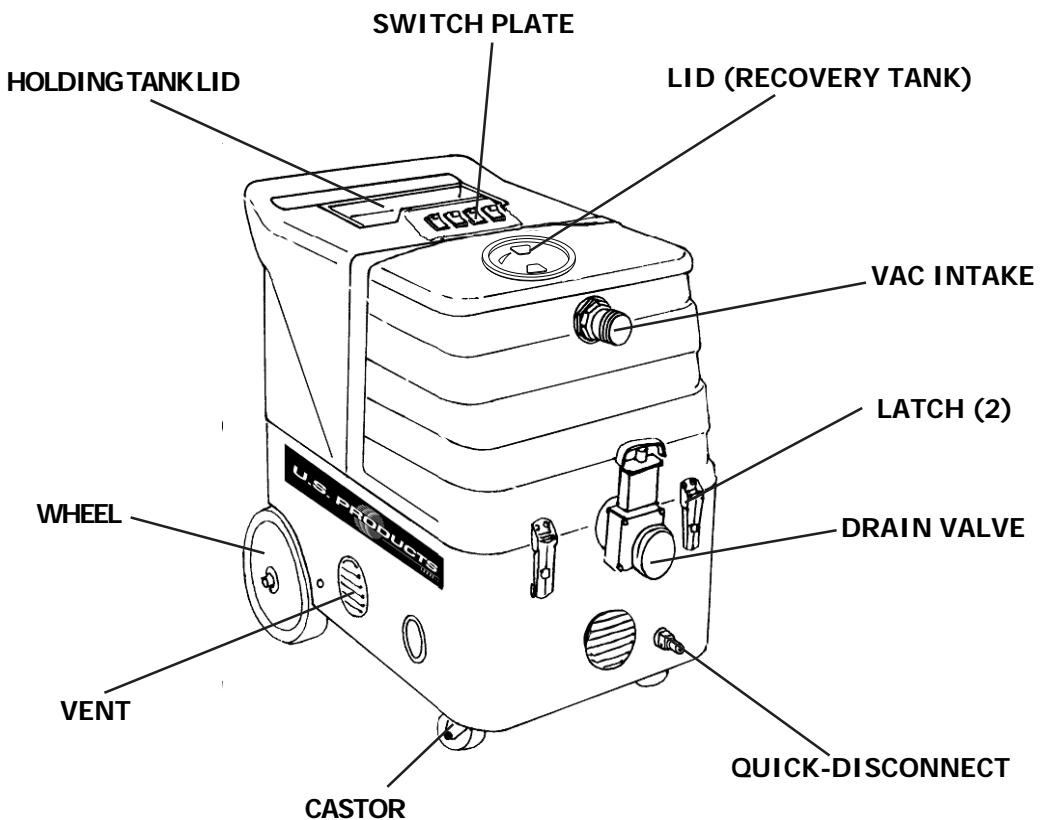

SET-UP and OPERATION:

1. Fill the holding tank with clear water and the detergent of your choice. Mix well. Although this machine is designed to supply instant hot water, the addition of warm or hot water to the holding tank would be a plus factor. Never put water hotter than 54 °C/130 °F in the tank.
2. Plug in cord #1. This cord runs the pump and vacuums.
3. Turn on the pump and spray through the cleaning tool for a few seconds to fill the lines with solution.
4. Plug in cord #2 (identified by a red "H"). Wait 2 minutes for the heat exchanger to reach operating temperature. You may now begin cleaning.

NOTE: It will take about 10 seconds for the initial heat to reach the wand.

BALL FLOAT VAC SHUTOFF:

When the recovery tank is full, the float system will shut off the incoming air flow and prevent water from entering the vacuum motors. The float may not work properly if the float filter is clogged or if there is foam in the tank.

CAUTION: To avoid vac motor damage, always make sure the float filter is clean and the ball travels freely before turning on the machine, and use a defoamer whenever foam is present.

TROUBLE SHOOTING:

IF THIS	CHECK THIS
NO SPRAY	Solution tank is empty. Clogged spray tip. Pump not running. Valve on wand not operating
PUMP DOES NOT RUN	No power to pump. Test the switch. Test the pump motor. Replace if necessary.
LOW SUCTION	Debris plugging cleaning tool or vacuum hose. Drain gate is not completely closed, or seals are damaged. Vacuum lid is not closed or gasket is damaged.
NO SUCTION	No power to motor. Test the switch. Test the vacuum motor.
LOW HEAT	Spraying too long. Try spraying for 12-15 seconds per cycle. Heat exchanger needs to be flushed. Wrong tool being used. Too much water passing through, longer hose or larger diameter hose, than standard.
NO HEAT	Heat is not turned on. No power in the wall outlet - check to see if the breaker has tripped. No power to the heat switch - check wiring for 'opens'. No power out of heat switch, follow troubleshooting steps to isolate the problem or call your distributor for additional help

SPECIFICATIONS:

Rotomolded Body: Lifetime Warranty

Vacuum: Two, 2-stage 5.7"

VAC Shutoff: Ball float

Pump: Demand pump, 7 bar

Waterlift: 28 KPA

Heat: 90° C

Heater: 2000 Watts


Wand: Stainless steel, single bend, twin tip

Weight: 34 Kgm.

Dimensions: 63.5H x 46W x 73L (cm)

FORM NO. 56041899 - 5

revised 10/10

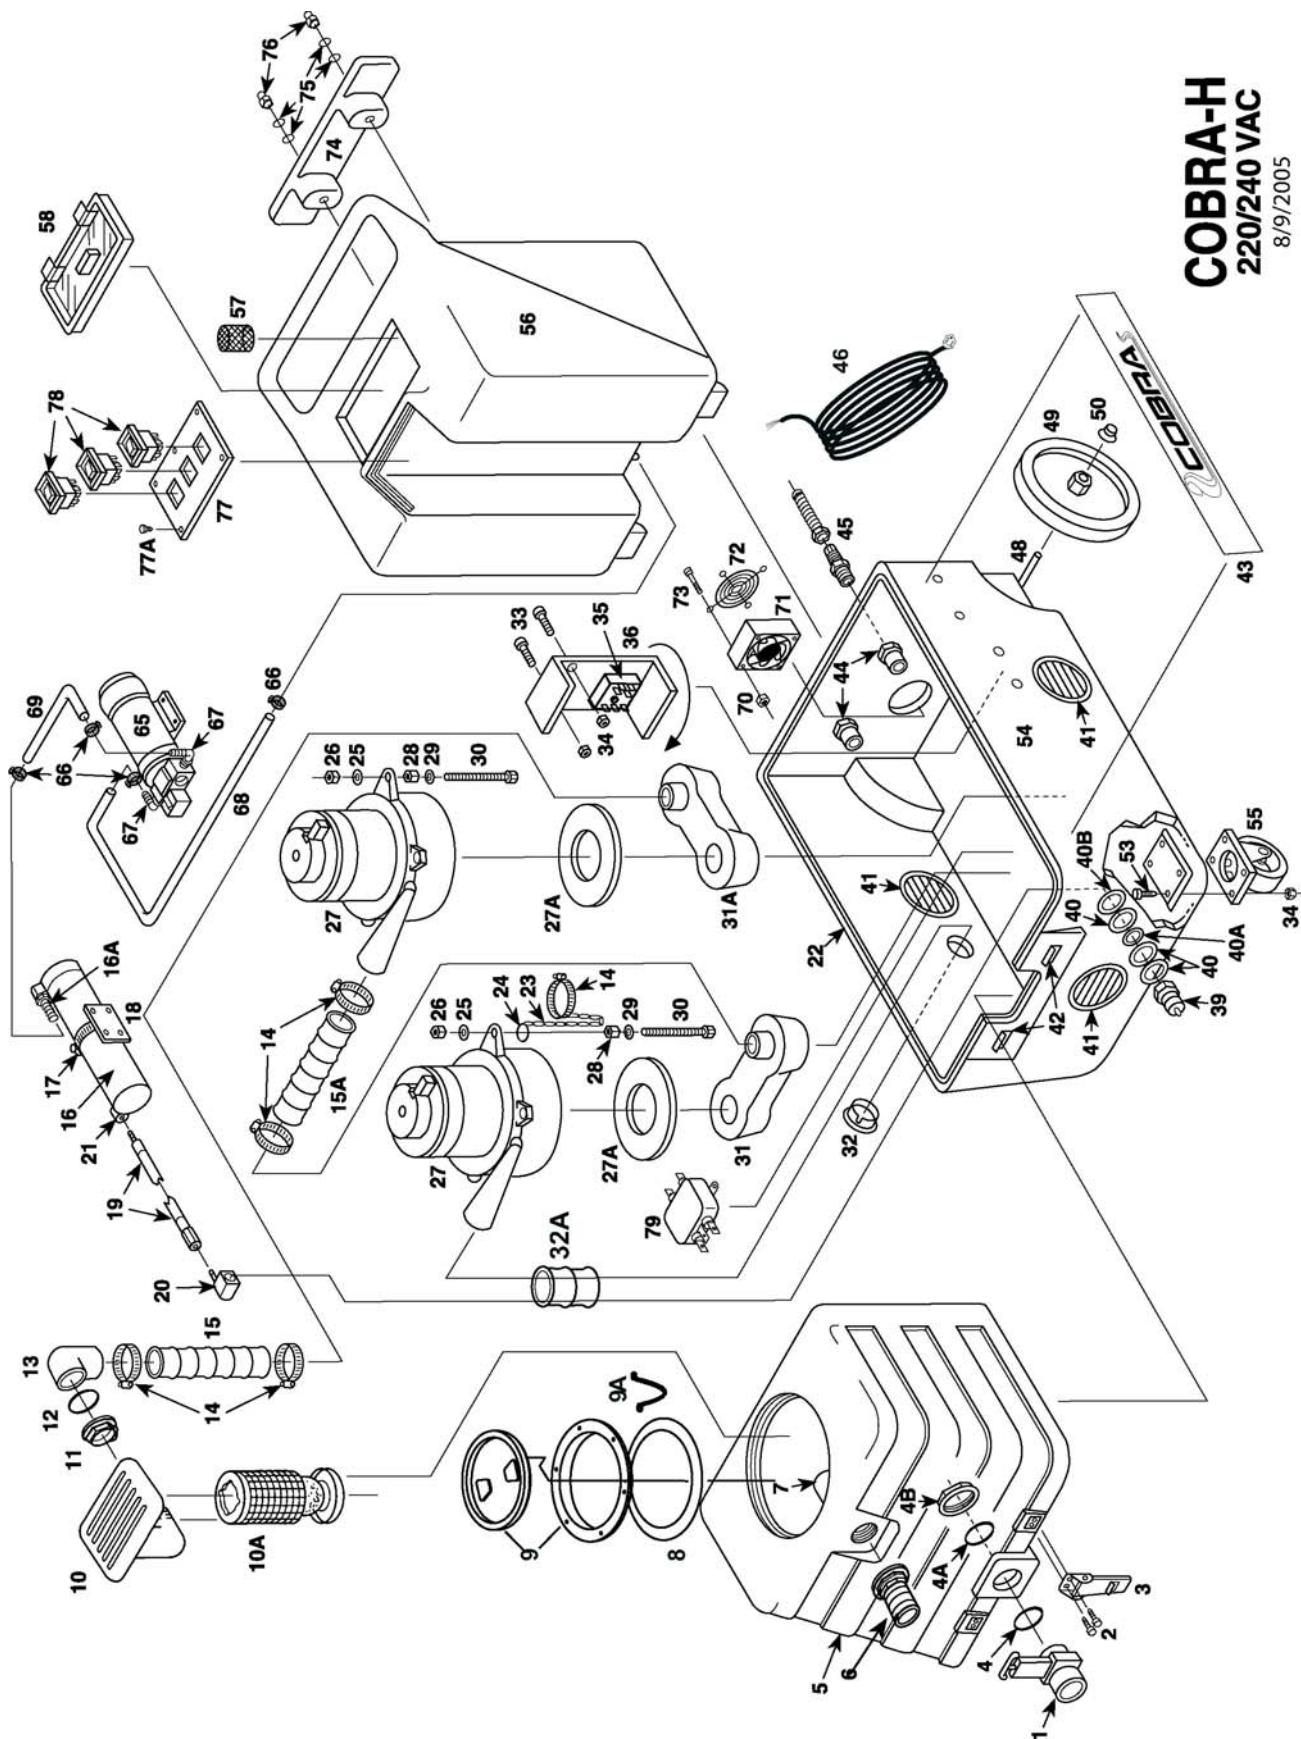

COBRA-H
220/240 VAC

8/9/2005

COBRA-H 240V

PARTS LIST

<u>ITEM No</u>	<u>PART No</u>	<u>DESCRIPTION</u>	<u>ITEM No</u>	<u>PART No</u>	<u>DESCRIPTION</u>
1	903	Drain Gate (See Misc.)*	40	115	Washer, Fiber
2	21C	Screw, 8-32 X 5/8", S/S	40A	116A	Bushing, Fiber
3	908	Latch	40B	31	Washer, Brass
4	187	O-Ring, Small	41	928	Louver, 3" (includes screws)
4A	187B	Washer, rubber	42	909A	Latch Strike, for Latch, S/S
4B	185	Nut 1-1/2"	43	2001A	Label, Cobra-H
5	FP208	Vacuum Tank, Complete	44	937	Reducer, PVC
6	907	Hose Barb, 1-1/2"	45	184	Cord Retainer
7	922	Elbow, PVC, 1-1/2"	46	2019	Power Cord
8	1074	Gasket (machines made after 2-15-05)	47	801C	Hinge pin
9	2086A	Lid and Ring (machines made after 2-15-05)	48	910-16.93	Axle, 17"
9A	FP436	Chain and Hardware	49	2003	Wheel, 8"
10	FP193	Ball Float Assembly, Complete	50	27A	Axle Cap, Black
10A	924	Float Ball and Cage	51	2019	Power Cord, 25'
11	185	Nut, 1-1/2"	53	5	Bolt, 1/4" X 3 1/4"
12	187B	O-Ring, Large	54	BS-6	Base, Cobra, Black
13	921	PVC, Elbow, 1-1/2"	55	2002	Caster, Swivel, #3"
14	156	Hose Clamp (size 28)	56	HT-2	Holding Tank Cobra
15	430B	Hose, Vacuum, Rubber 2" X 21"	57	207A	Filter, Pump Inlet, 40 Mesh, S/S
15A	FP171C	Hose, Vacuum, Rubber 2" X 16"	58	901	Lid, Holding Tank
16	FP207B	Heat Exchanger, Complete	65	2017	Pump, 100 PSI
16A	208	Hose Barb	66	166	Hose Clamp
17	76A	Hose Clamp	67	108A	Hose Barb/Elbow
18	455	Mount, Heat Exchanger	68	FP165C	Hose, 3/8" X 13", Pump Inlet
19	2012	Hose 1/4" X 26", Outlet	69	FP166	Hose, 3/8" X 48", Pump Outlet
20	91	Elbow, Brass, 90 Degree	70	16	Lock Nut, 6/32
21	103	Elbow, Brass, 90 Degree	71	2018	Fan, Cooling
22	FP439	Gasket, Cobra Base	72	2015	Guard, Fan
23	FP233	Chain, 13"	73	2B1	Screw, 6/32 X 2-1/4"
24	194	Ring Clip	74	CWBLK	Cord Wrap (Black)
25	14	Washer, 1/4"	75	203	Washer, Plastic
26	8	Lock Nut, 1/4-20	76	260	Nut, Acorn, 3/16"
27	407A	Vacuum Motor	77	2006	Switch plate
27A	2013	Gasket, Vacuum Motor	77A	28	Screw
28	136	Nut, 1/4-20	78	FP578	Switch, rocker with cover
29	137	Washer, Lock, 1/4"			
30	135	Bolt, 1/4-20 x 3-1/2"			
31	MA-6	Manifold, Vacuum			
32	FP220	Flange, Exhaust, w/Hose & Hardware			
32A	430	Hose, 2" x 3"			
33	4	Bolt, 1/4 X 1"			
34	8	Lock Nut ,1/4-20			
35	see Misc	Thermistor Control with Potentiometer**			
36	918	Heat Sink Plate			
39	45	Quick Disconnect, Male, 1/4 p.t.			

MISCELLANEOUS ASSEMBLIES/PARTS

*FP231A Drain Gate Assembly, Complete with O-Rings & Nut.

**FP194E Heat repair kit for machines built after 6-2005

(NOTE: Items in kits not sold separately.)



425-322-0133 / 800-257-7982 / FAX: 425-322-0136
11015 - 47th Ave. W. / Mukilteo, WA 98275
VISIT US AT: <http://www.usproducts.com>